 
 
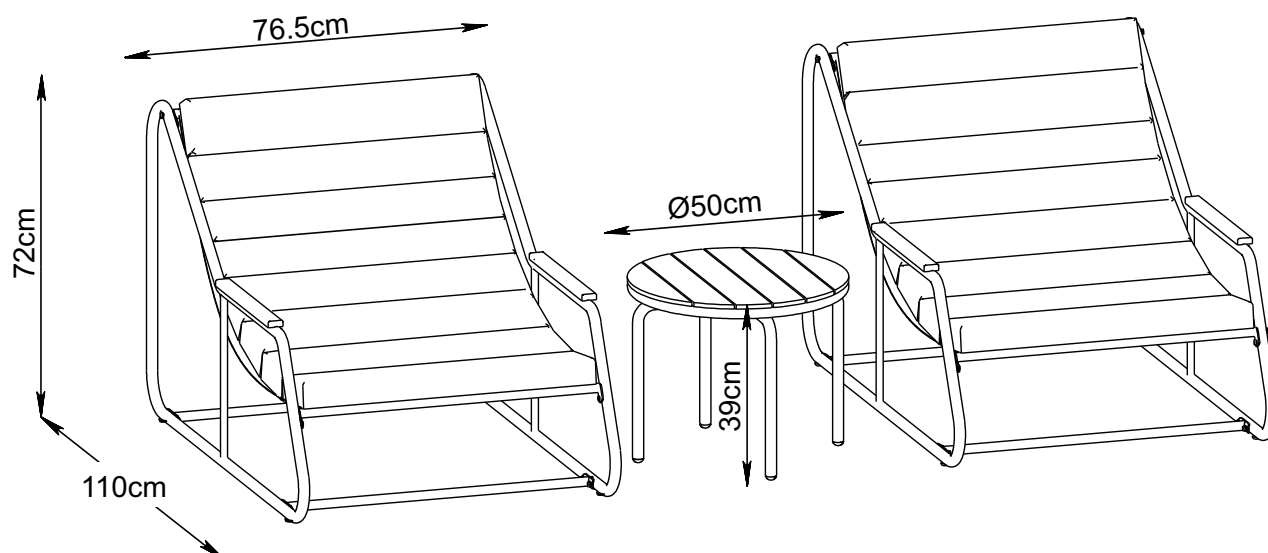 
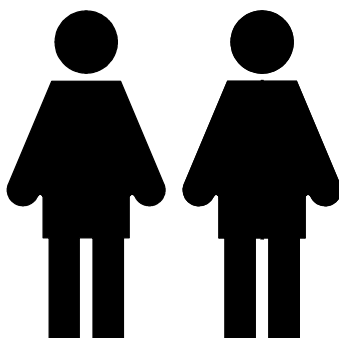 


Assembly Instructions

9036

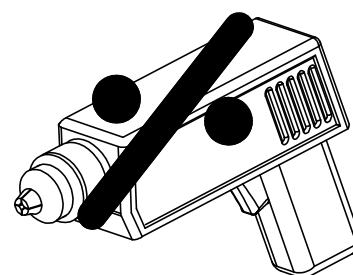

100%
Wood from well-
managed forests
FSC™ C163800

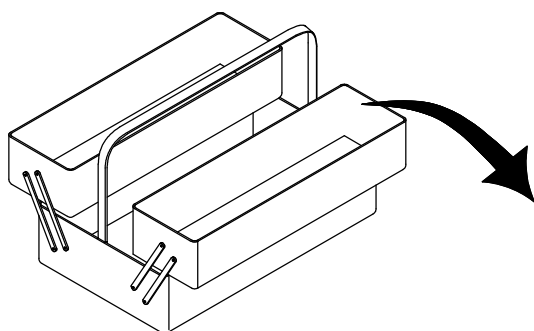

NOTICE – These instructions must be saved for future use – Instructions must be followed

EN: WARNING!

Follow the manual thoroughly and keep it for further reference.

Please read the entire manual carefully before starting to assemble and/or using this product.

In order to avoid scratching the furniture it should be assembled on a soft layer - could be a rug or blanket.

Be cautious of potential finger entrapment hazards when assembling, using, adjusting or disassembling the product due to its moving parts. The furniture must only be used by children under adult supervision.

Plastic bags, plastic film and small parts can be dangerous!

To avoid danger and risk of suffocation keep away from babies and children!

The furniture and covers may smell after unpacking. The odor is harmless and will disappear after a few days, or even faster with good ventilation.

Before use make sure the furniture is firmly positioned on a stable, hard surface to prevent tipping over.

This outdoor furniture is tested according to European standard EN 581 and is intended for domestic use only.

Seating is tested to a maximum weight of 110 kgs per person.

Sitting or standing on tables is not permitted.


CHECK LIST

No.	Article number	Quantity	Dimension (mm)	Packed in box	✓
1	232869	2	1100x35x720	1	
2	232870	2	1100x35x720	1	
3	232871	4	715x75x20	1	
4	232872	2	1260x670x22	1	
5	232873	2	1260x670x80	1	
6	232874	1	Ø500x37	1	
7	232875	2	238x353x25	1	
8	232876	1	500x353x25	1	
9	232877	1	Hardware bag	1	

 90360000

 
 
 

 

 
No.	Article number	Quantity	Dimension (mm)	Packed in box	✓
1	232869	2	1100x35x720	1	
2	232870	2	1100x35x720	1	
3	232871	4	715x75x20	1	
4	232872	2	1260x670x22	1	
5	232878	2	1260x670x80	1	
6	232874	1	Ø500x37	1	
7	232875	2	238x353x25	1	
8	232876	1	500x353x25	1	
9	232877	1	Hardware bag	1	

90360001

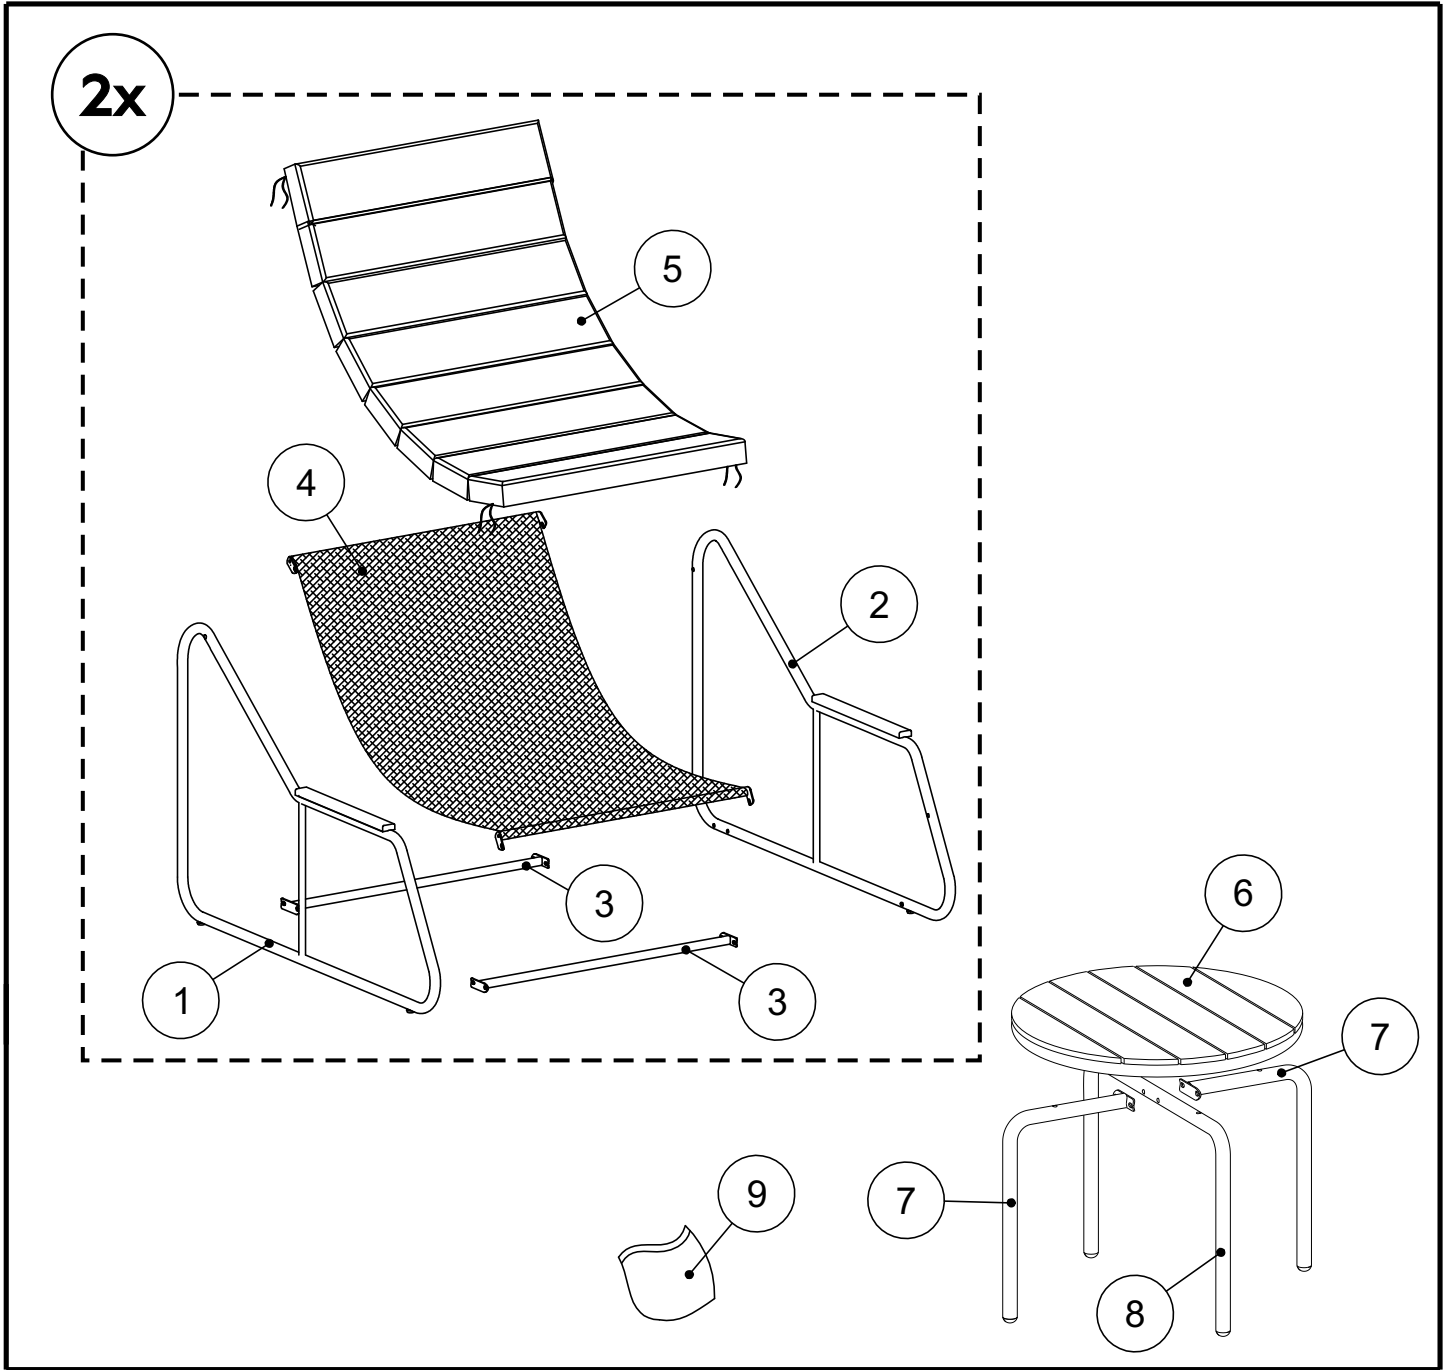


CHECK LIST

Réf./No.	Réf./Art.	Qty./Stck./Quantité	✓
A	232877	10	
B	232877	24	
C	232877	4	
D	232877	38	
E	232877	2	
F	232877	2	
G	232877	1	



10 - A  M6x45mm (M6 x 1-3/4")	24 - B  M6x20mm (M6x 13/16")	4 - C  M6x35mm (M6x 1-3/8")	38 - D  M6	2 - E  4mm (5/32")	2 - F  M6
1 - G 					



 
Dear Customer.
Below you have the opportunity to measure the Enclosed Hardware.

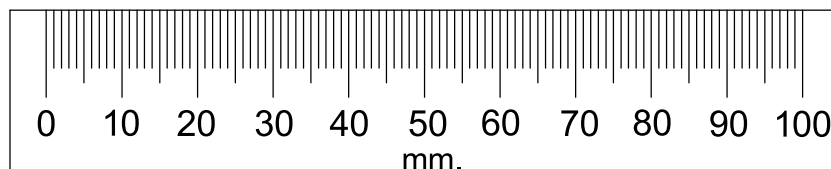



2x

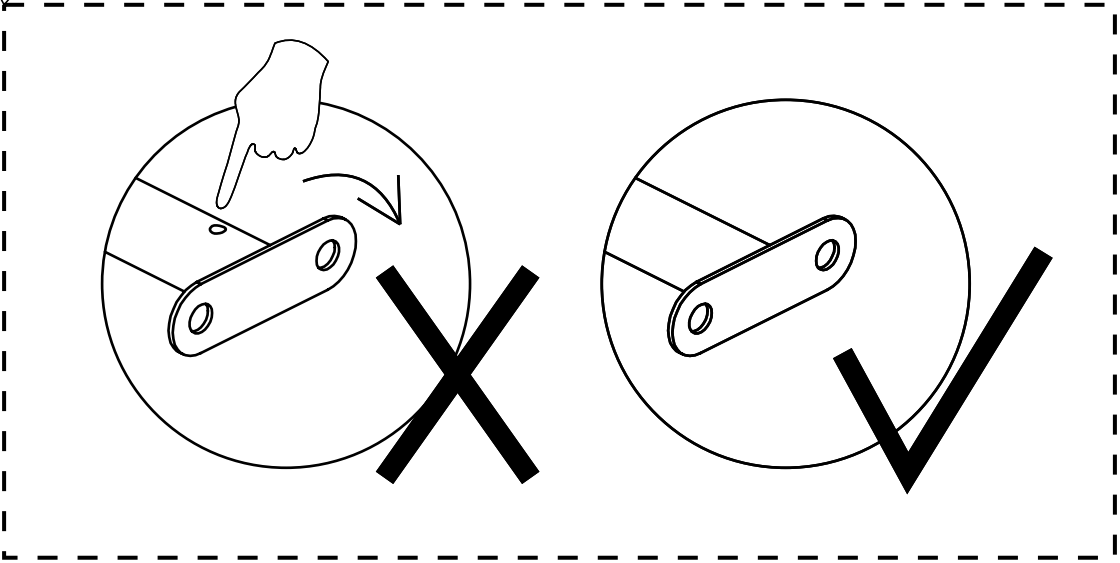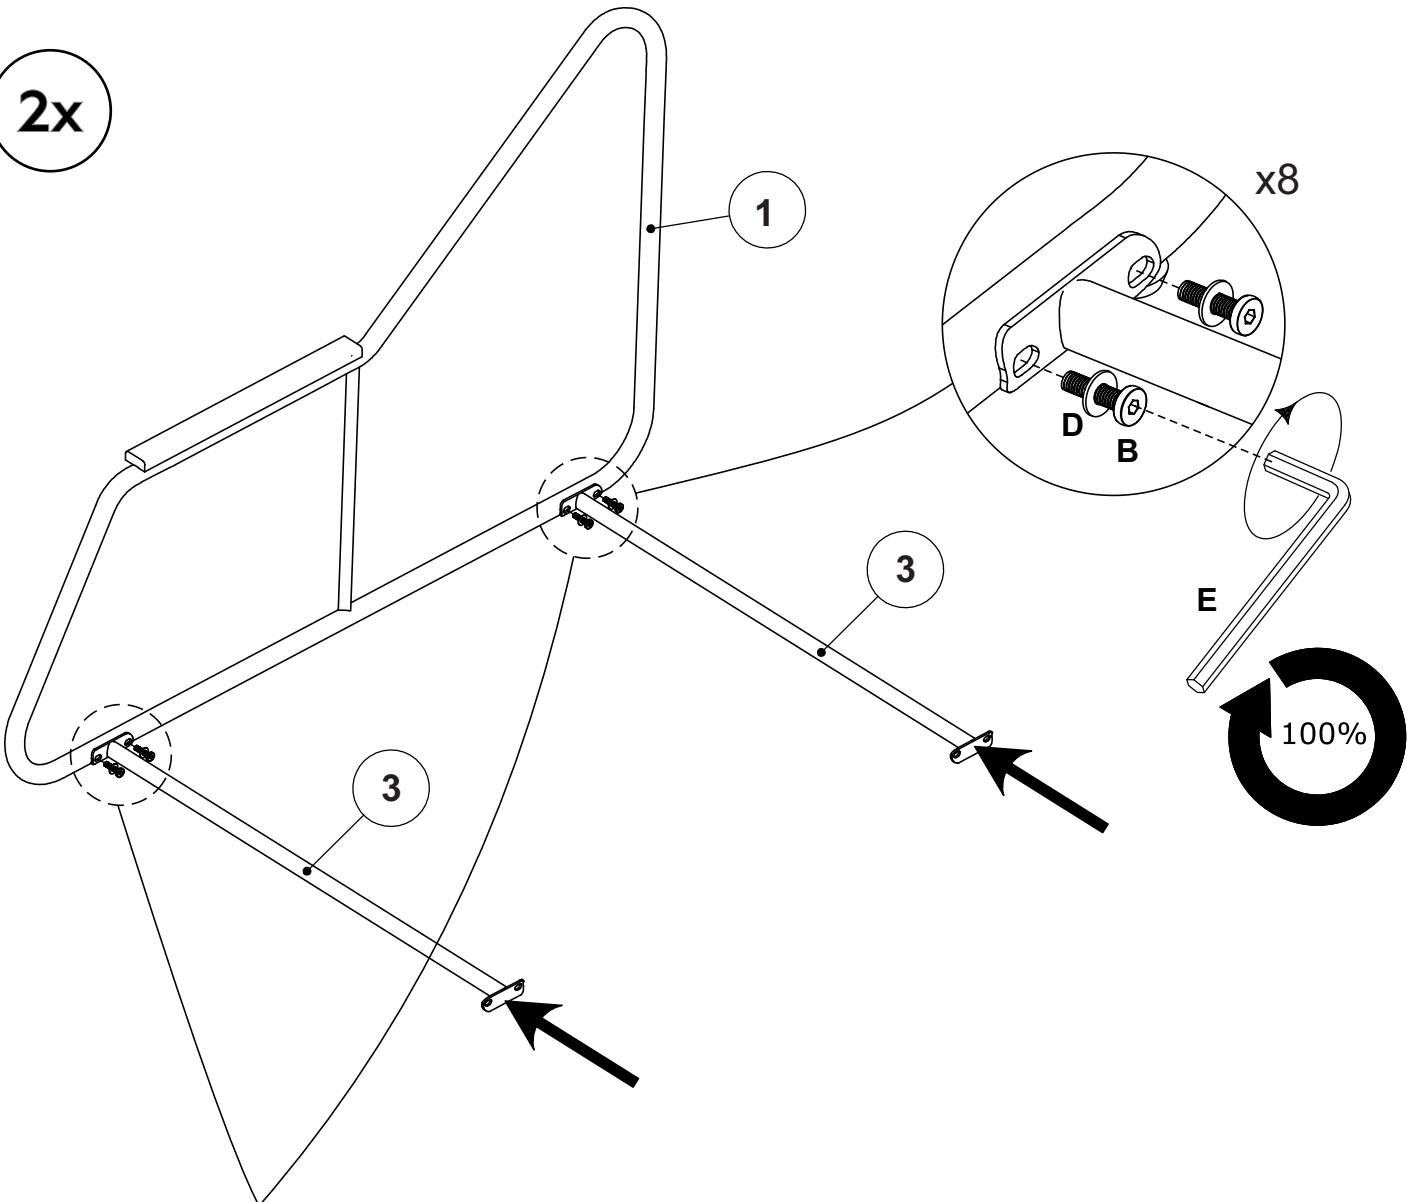  

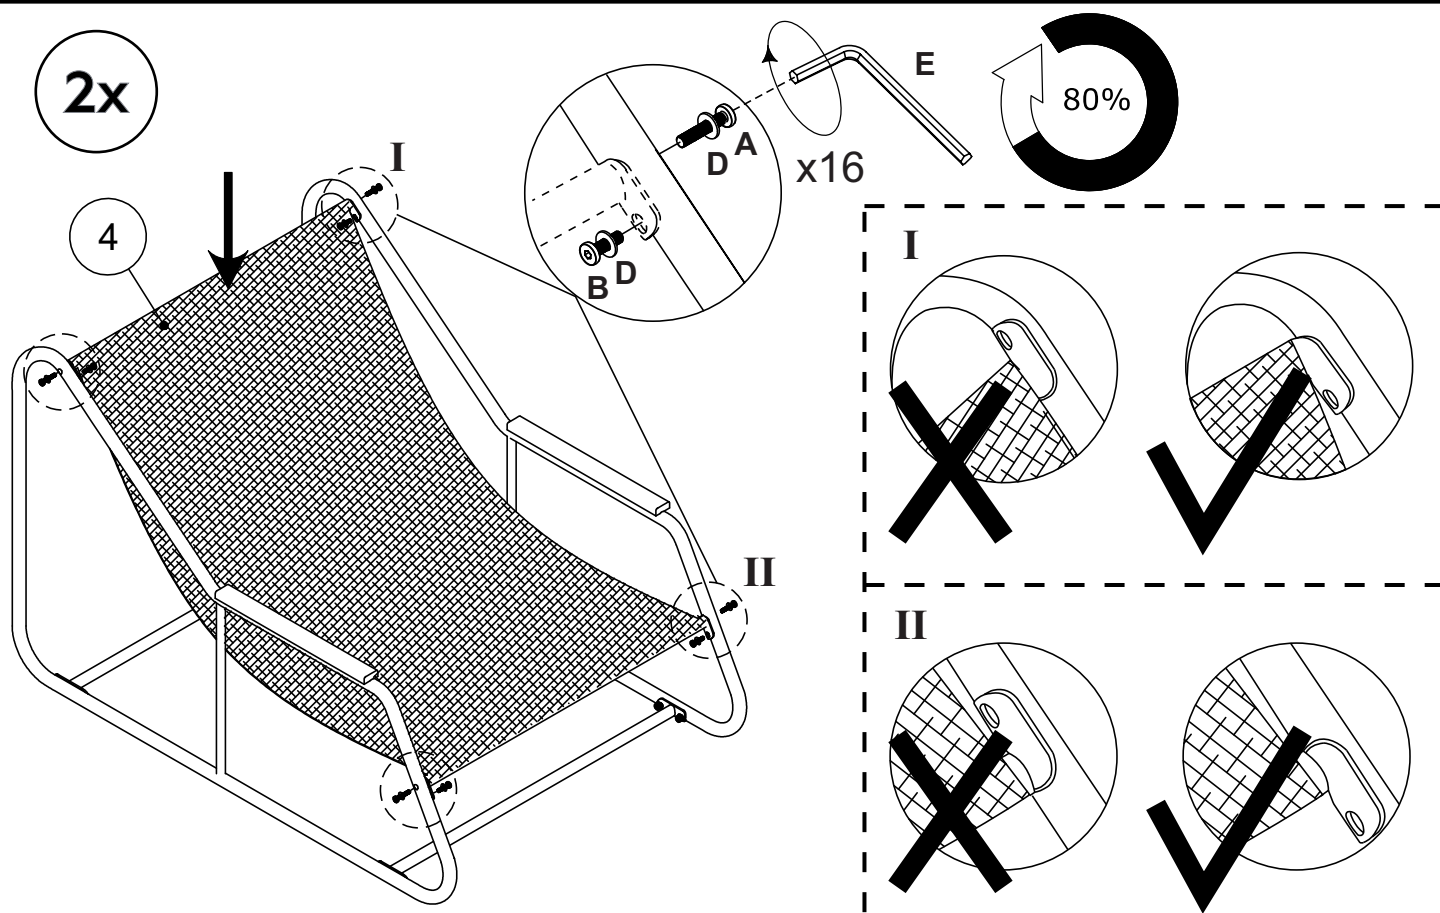 
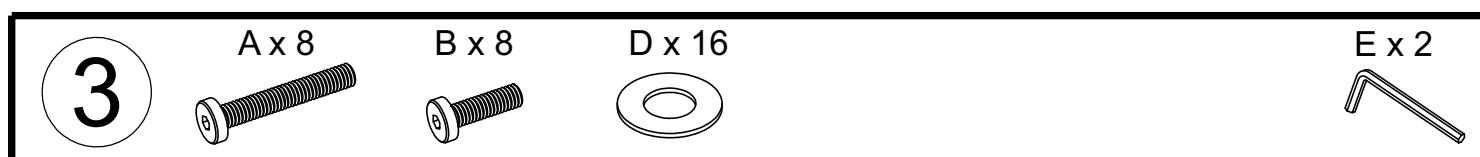 
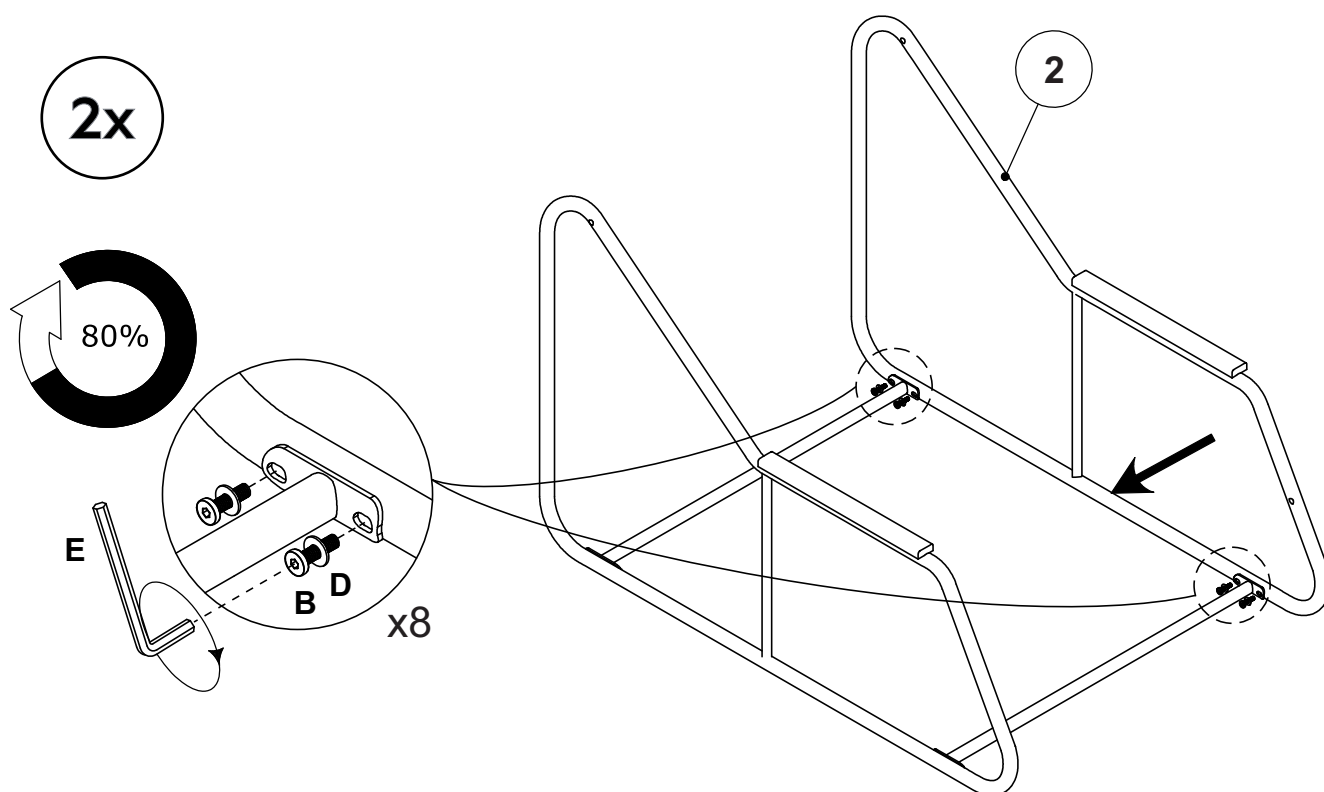 


4

Ex 2



 
 
 
2x

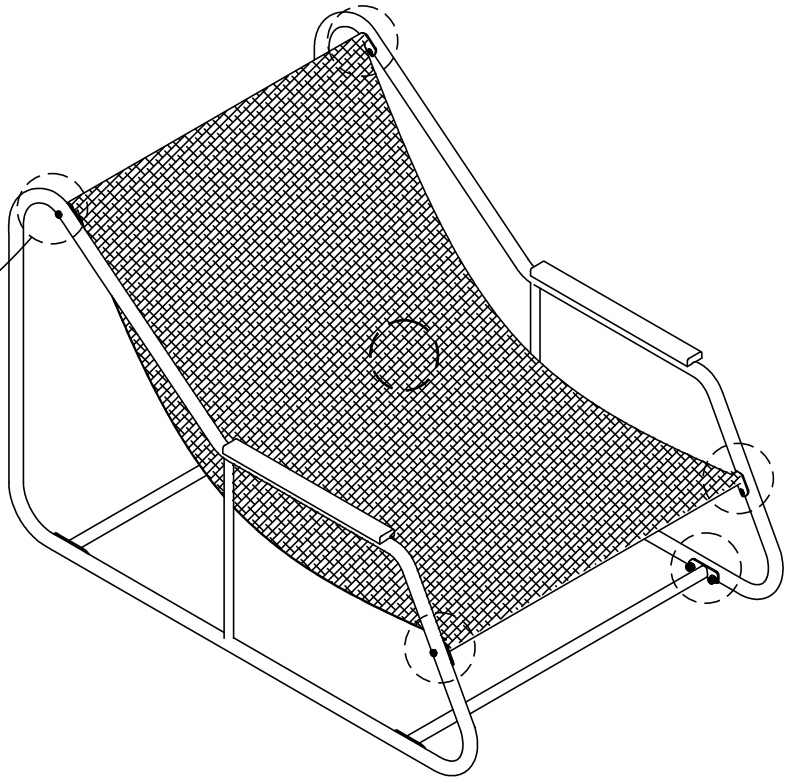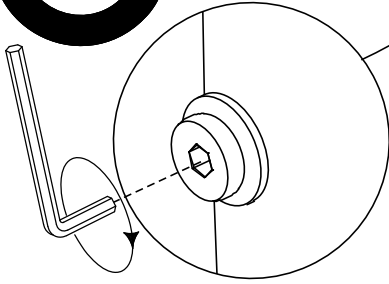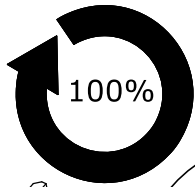

5


2x

   5

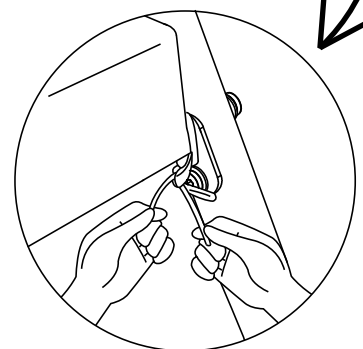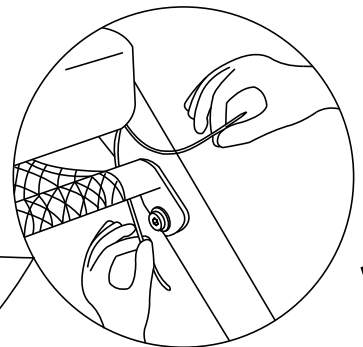
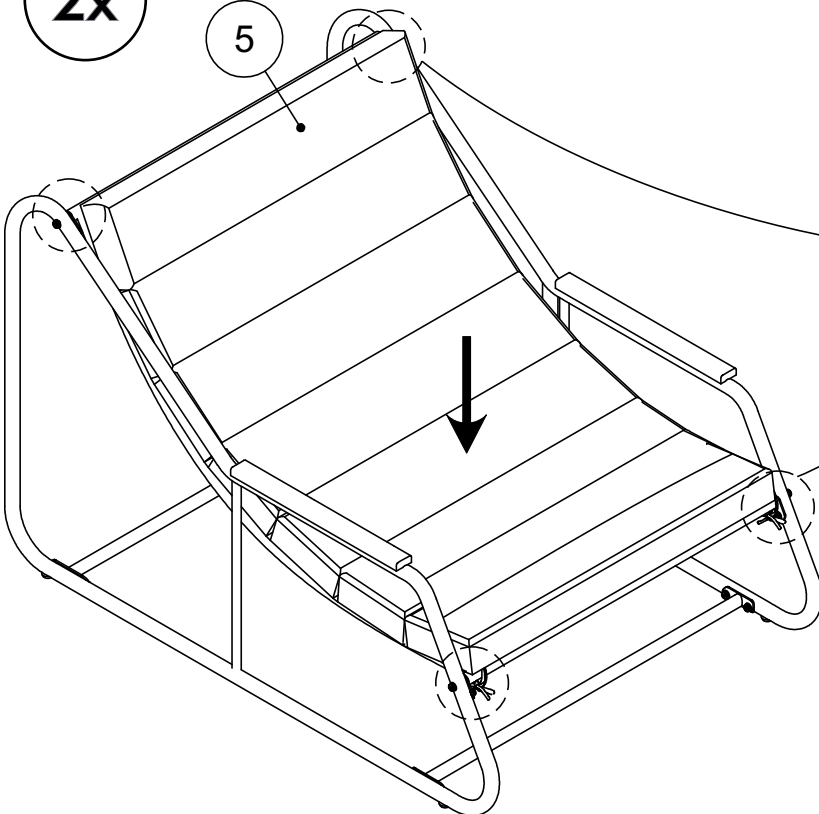


6

 2x

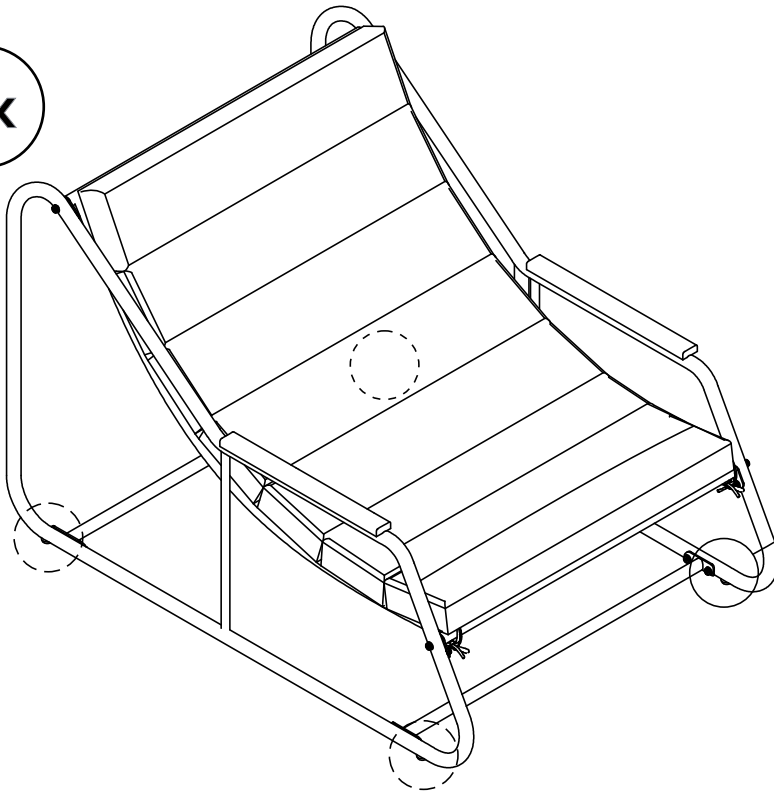

7

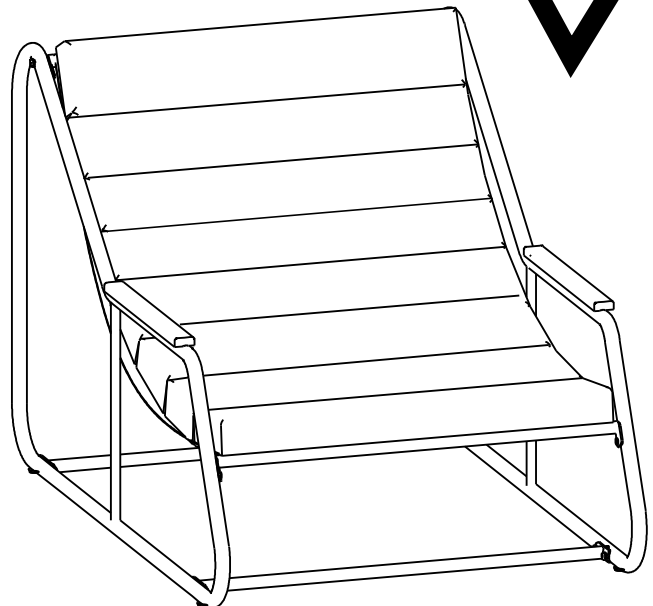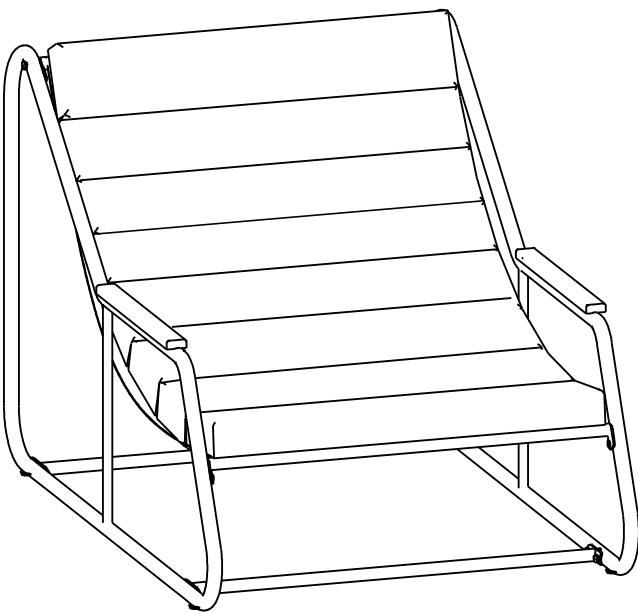  

8

 
A x 2

 
 
D x 4

F x 2

E x 2


G x 1

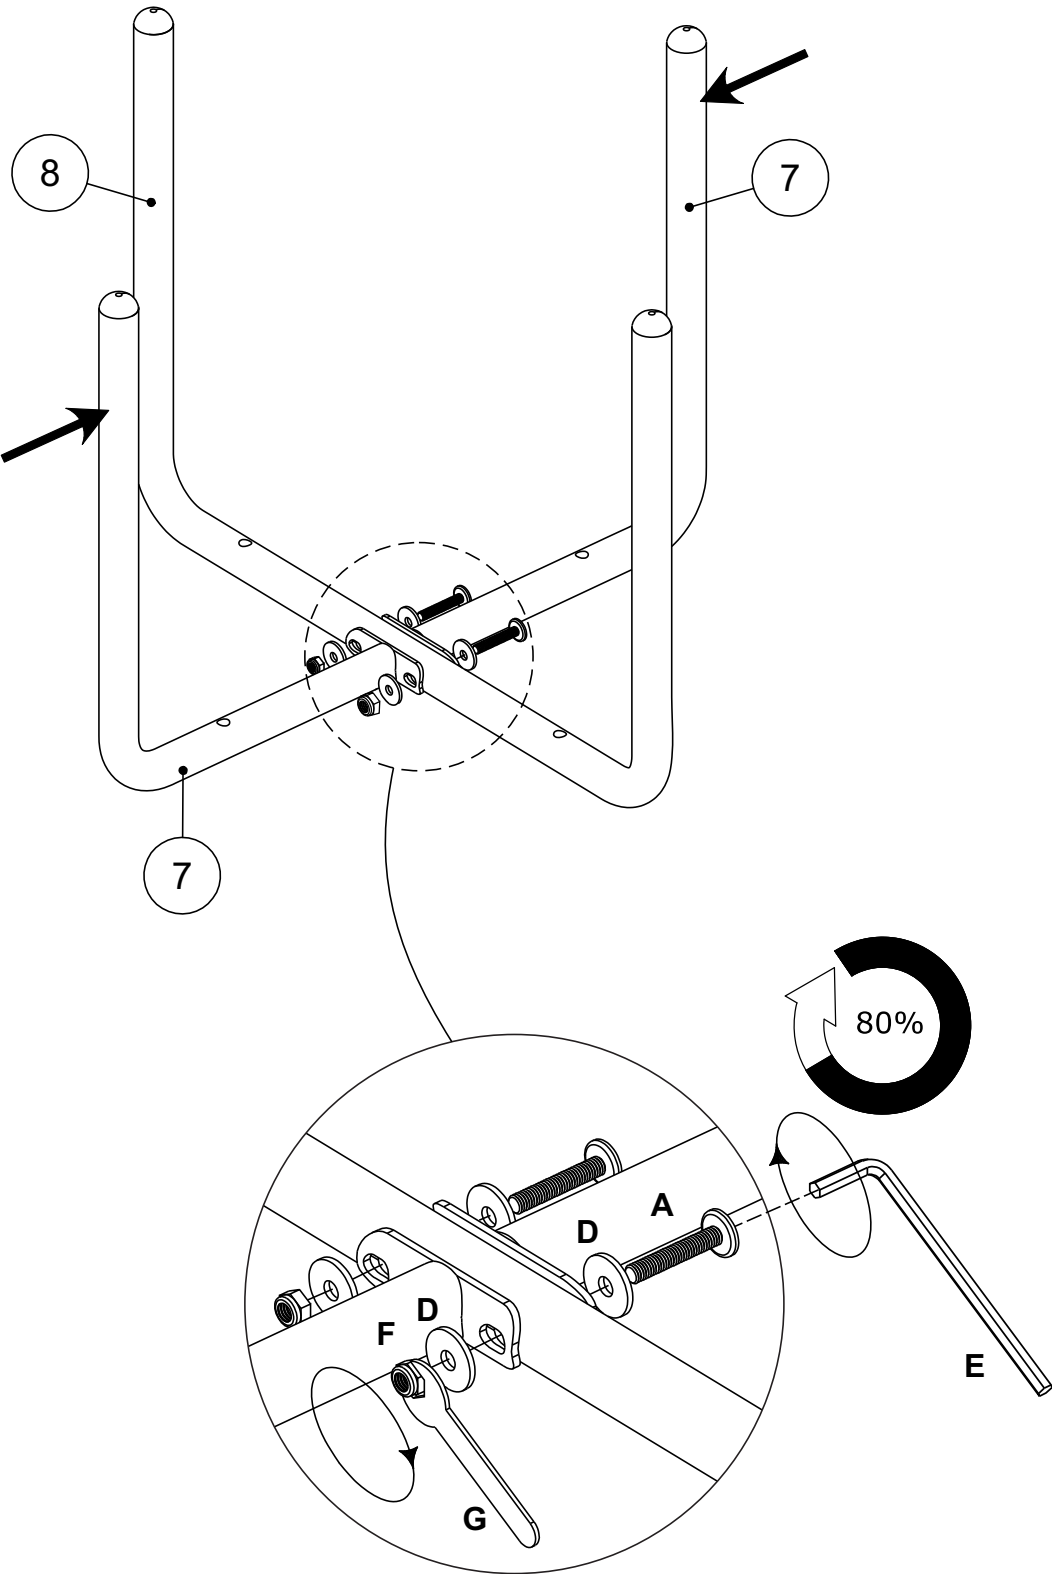

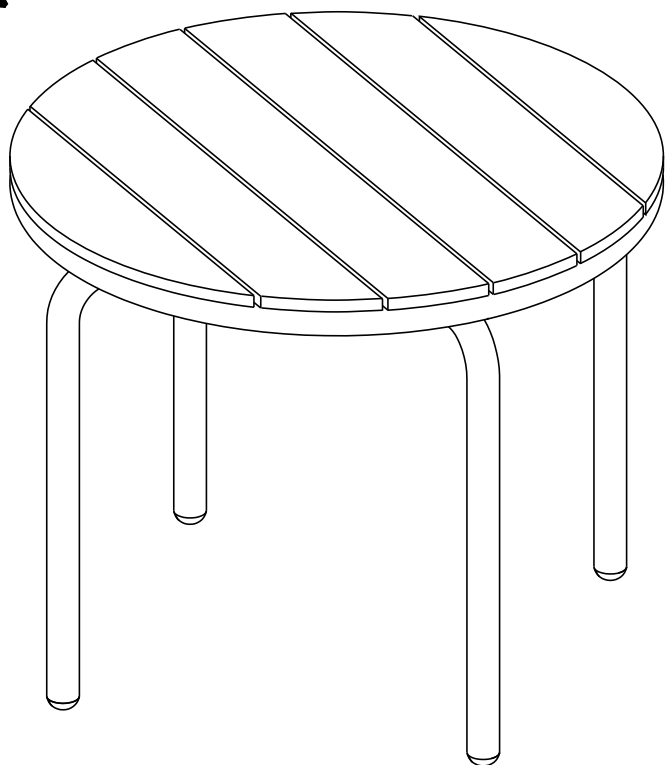
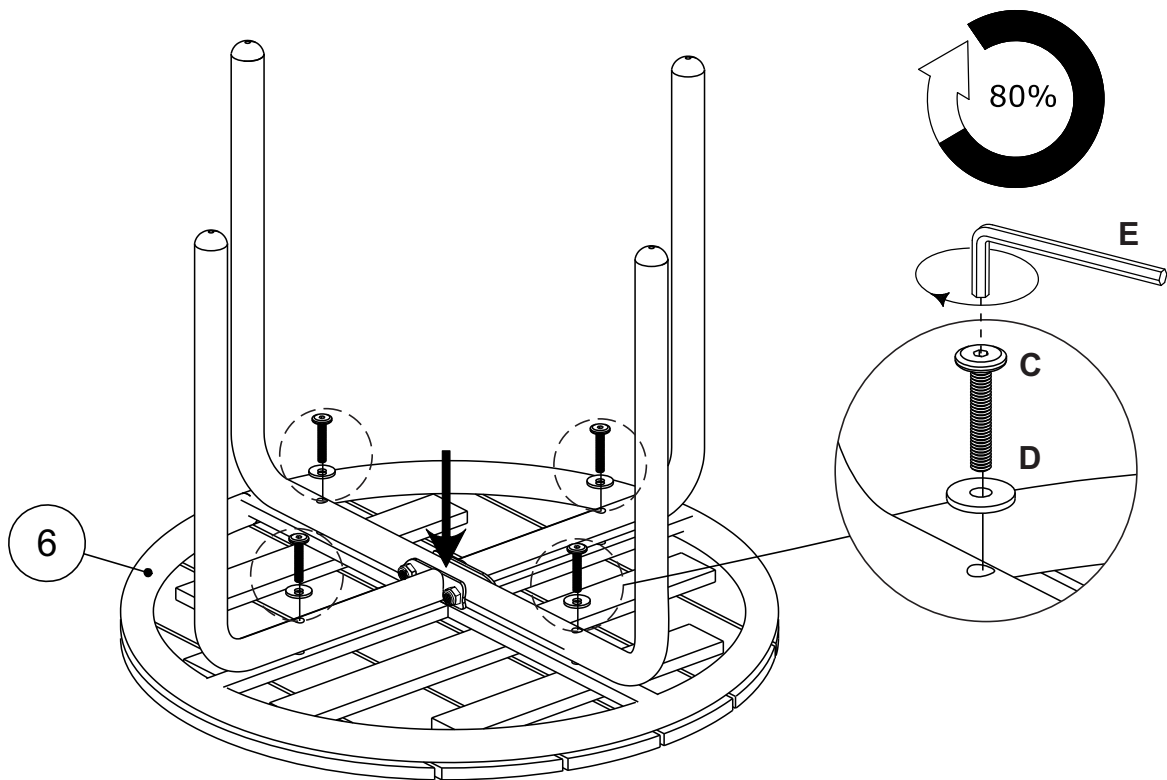



10

 Ex 2

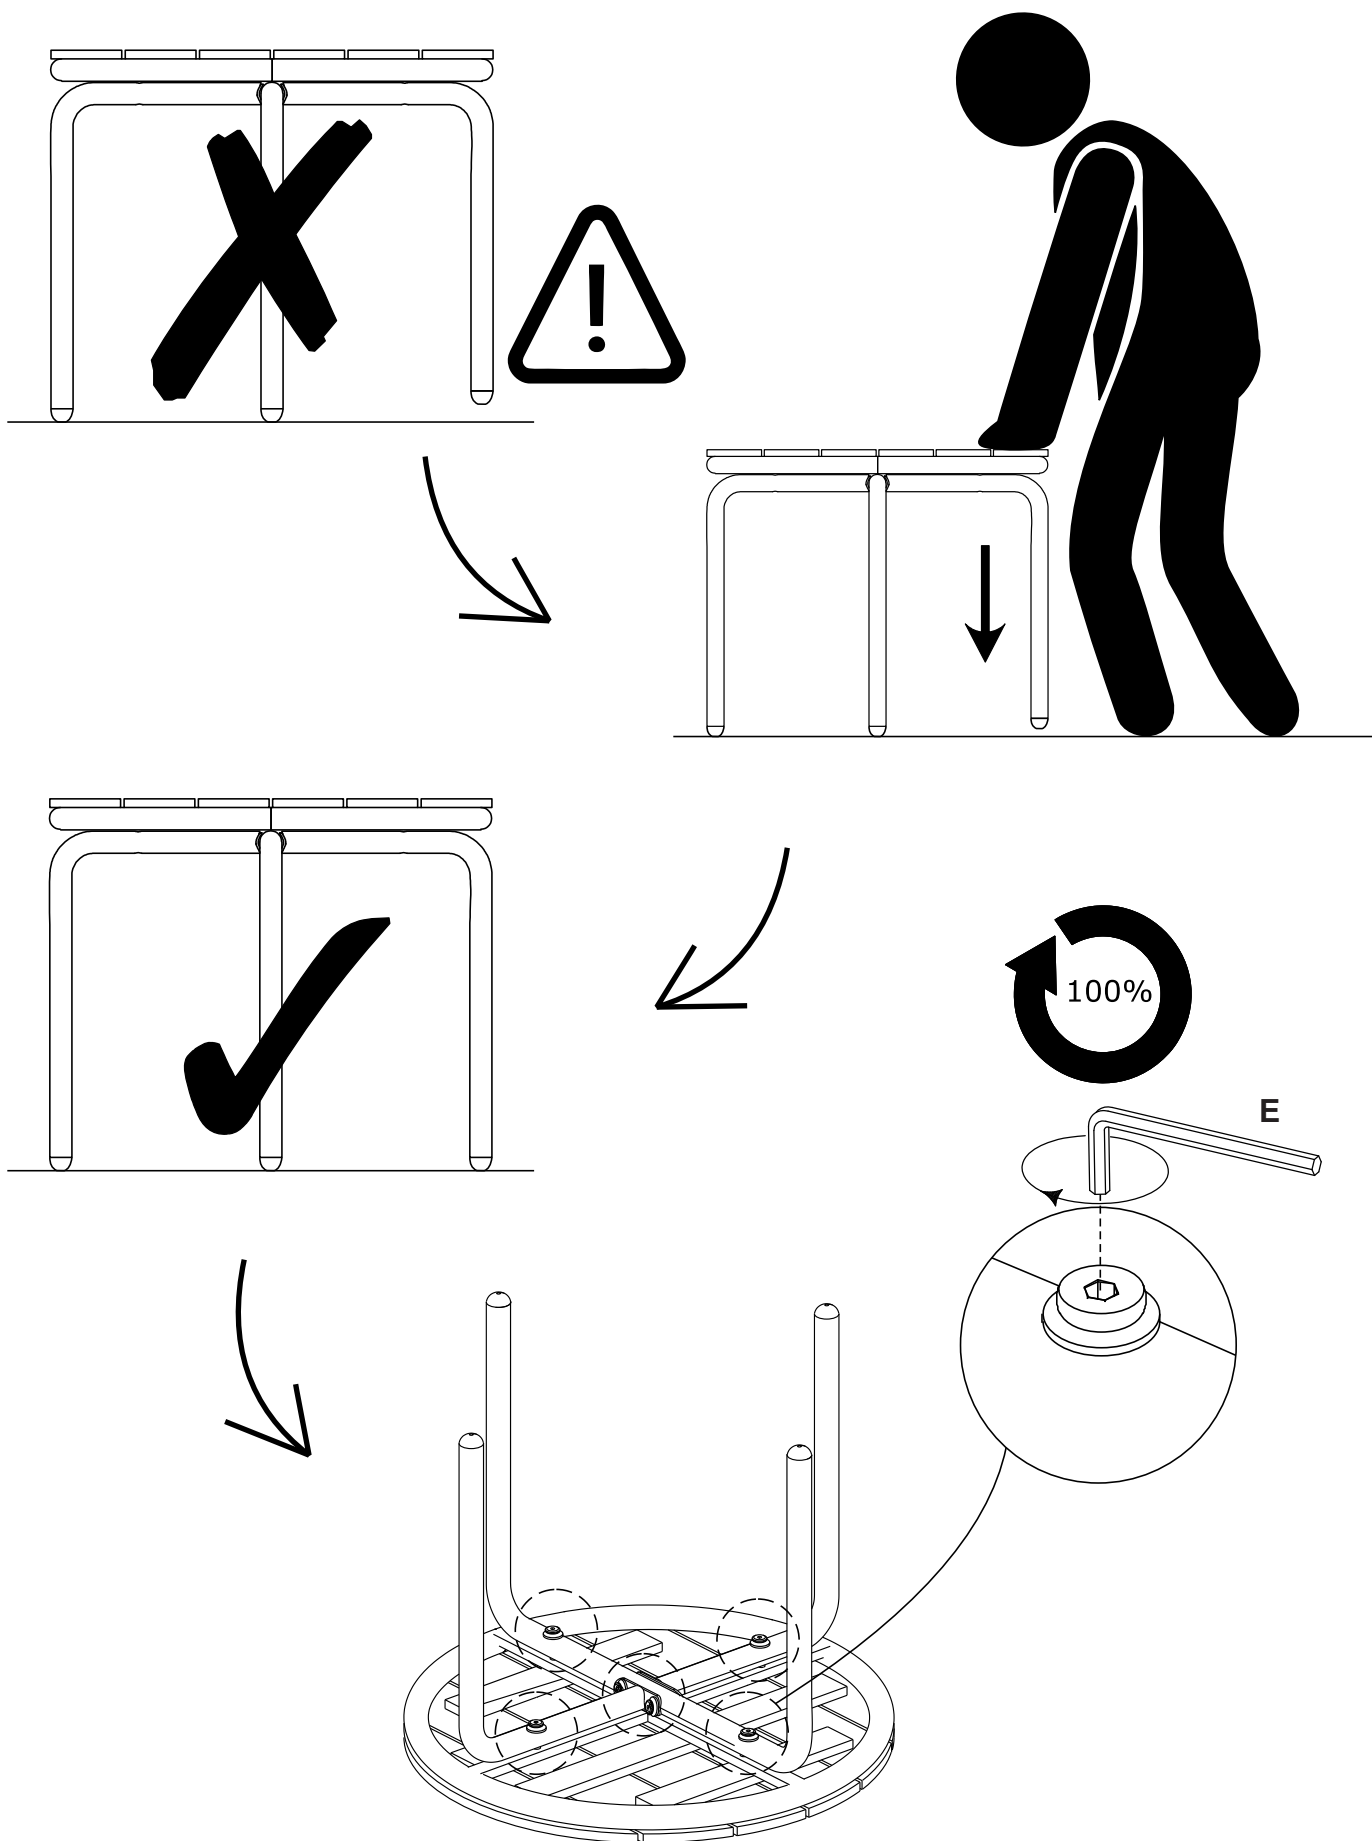

11

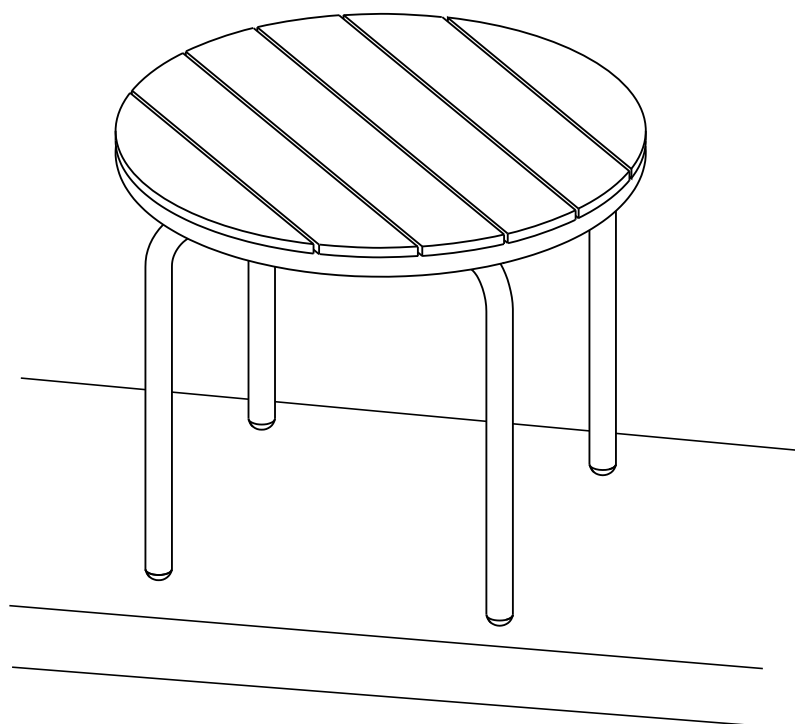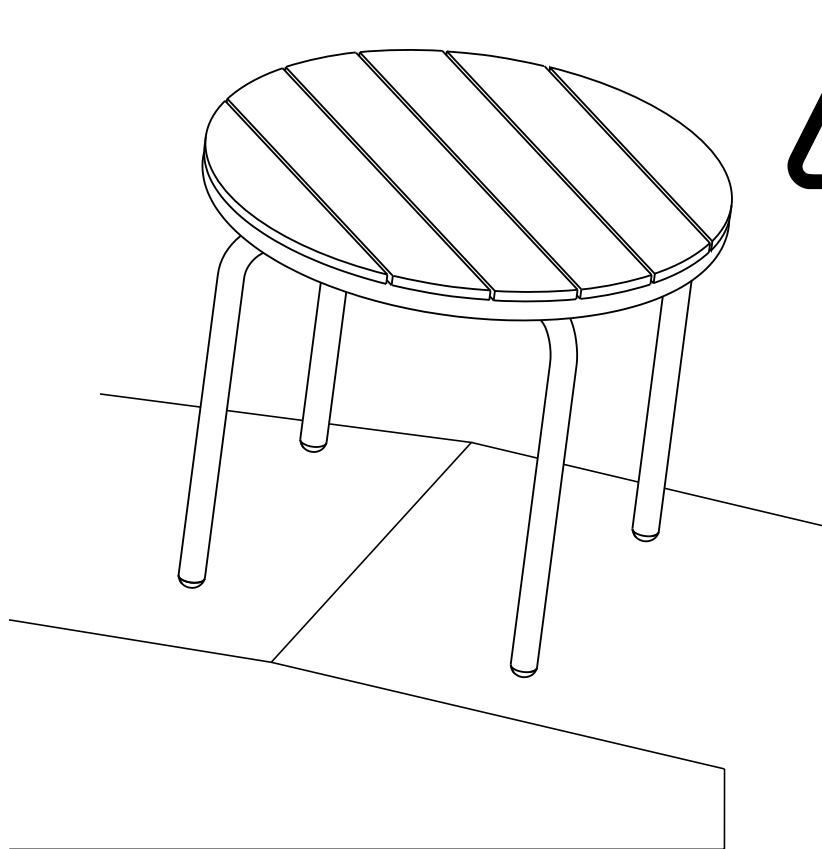  

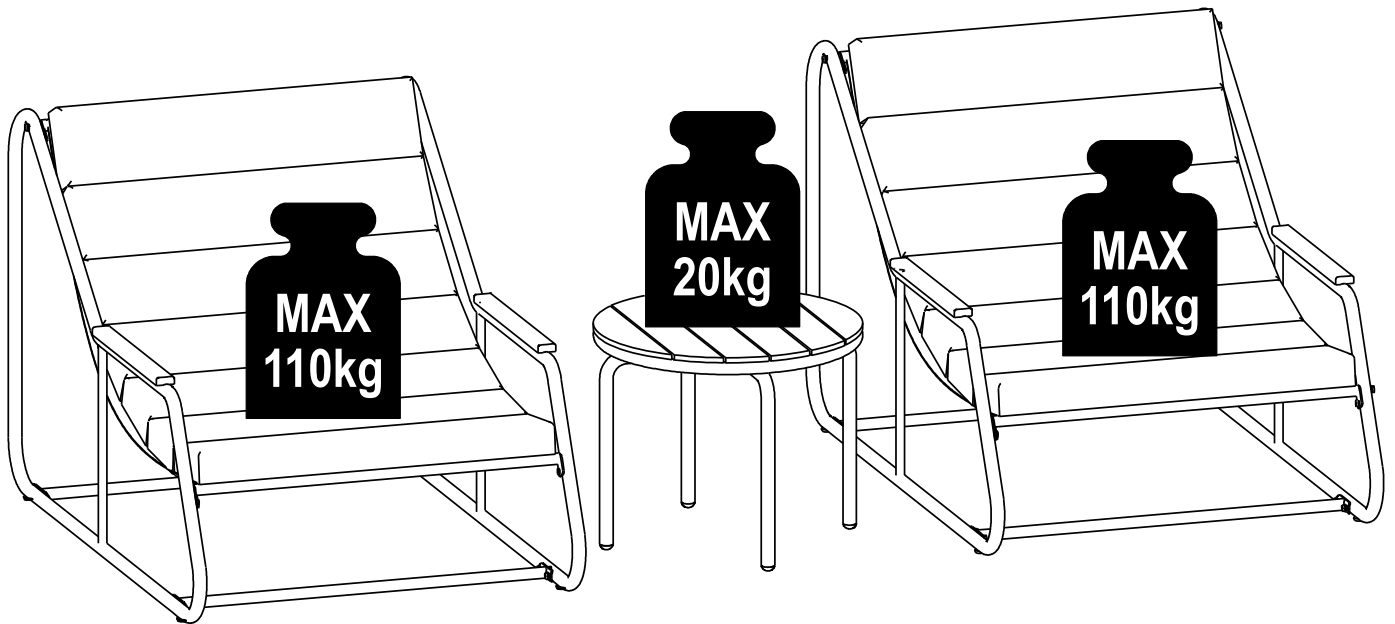 

EN: MAINTENANCE INSTRUCTIONS – OUTDOOR FURNITURE

Congratulations on your new outdoor furniture, which will bring many years of joy if following the below recommendations and instructions.

Generally, protect and secure your outdoor furniture from harsh weather conditions and UV exposure.

When not in season, clean the furniture and store in a protected, dry and ventilated place. Make sure of good ventilation to prevent condensation and mildew.

General cleaning instructions: wipe clean with a clean damp cloth or soft sponge wrung in clean, lukewarm water. Do not use detergents, solvents, substances containing abrasives as they may cause scratches nor use other chemicals as this may cause discoloration. For soft covers and rope vacuum off dust and dirt, stains can be cleaned with mild soapy water, then leave to air dry. If removable covers refer to washing instructions.

All furniture assembled using screws must be re-tightened 2 weeks after assembly and once every 3 months in order to assure stability throughout the lifespan of the product.

Always ensure that the feet or felt pads provided with the product are suitable for your flooring.

Periodically check the position of the feet or felt pads used to ensure your floors are protected from scratches.

Do not place very hot or very cold objects directly on any surface and use coasters or similar for protection.

Color stains from eg. red wine or food must be wiped off immediately.

Exposure to direct sunlight can cause discoloration and premature aging – protective covers are recommended.

Placement of wooden furniture on grass or soil may lead to rotting – protect legs by using rubber foot caps.

TEXTILENE SLING:

To clean the sling, start by brushing off any loose dirt. Rinse the surface with a hose to remove surface dust. Then, prepare a cleaning solution using water and a mild, natural soap (avoid using detergents). Use a soft-bristled brush to gently scrub the material and allow the soap to soak in for a few minutes. Rinse thoroughly with clean water and let the fabric air dry completely.

CUSHIONS:

Seat cushions need to be turned, rotated and switched around to prevent deformation. Back cushions need to be plumped up frequently to keep their full and airy shape and to prevent deformation. Store in a dry, ventilated indoor space when not in use.

STEEL:

The steel frame requires minimal maintenance due to an anti-rust treatment beneath the powder coating. For daily care, follow the general guidelines.

If the surface is scratched or damaged, it's crucial to seal it immediately to prevent rust and avoid reducing the furniture's lifespan.

SOLID WOOD:

Wood is a natural raw material whose grain, color and knots are natural characteristics that make each individual piece of wood unique. Even after production, wooden furniture undergoes a constant process of change, responding to seasonal changes contracting in colder temperatures and expanding in warmer temperatures which may lead to small cracks and gaps. None of the above are valid reasons for complaint or affect the quality of the furniture.

OILED SURFACES:

Wood with oiled surfaces must be treated with a suitable oil minimum twice a year and preferably before taking into use. Start by cleaning the wood according to the general cleaning instructions. Smaller stains or scratches can be removed with sandpaper grain 180-220. Always sand along the wood's grain. The surface must be completely clean and dry before applying the oil. Apply the oil with a clean lint-free cloth along the grains of the wood. Let the oil soak for 15 minutes. The surface often feels rough after oiling but this is a natural reaction due to the wood's fibers rising. Eventually sand with sandpaper grain 220-280 along the grains of the wood. Remove excess oil and dust with a clean lint-free cloth. Let the furniture dry for at least 24 hours before use. Please also refer to instructions stated on the AI.