

Cove Chair Assembly Instructions



1. Box consists of
 - 4 x filled inner bags (vacuum-sealed in polybags)
 - 1 x outer cover.
2. Remove the inner filled bags from the polybags to release the vacuum seal.



3. Allow the inner bags to fully expand. For best results, wait **48 hours** before assembling to let the filling return to maximum fullness.



4. Once the bags have fully recovered, begin assembly:
5. Identify each filled bag.
 - 2 x arms
 - 1 x back
 - 1 x seat

Each inner filled bags is labelled "A", "B", "C", or "D".



6. Match the inner bags to the corresponding letters inside the outer cover. The labels will guide you on where to insert each piece.
7. Start by inserting the **seat cushion** into the cover.

Note: Ensure the zipper on the inner bag is aligned with the bottom zipper of the cover.



8. Use the Velcro to secure the seat filling tightly in place.



9. Insert the **left armrest** (with the zipper facing downward).




10. Insert the **right armrest** (zipper also facing downward).



11. Insert the **back cushion** into the cover, again making sure the zipper is positioned at the bottom.



12. Zip up the cover completely — your Cove Chair is now ready to use.

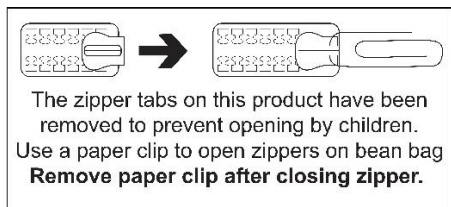

**DO NOT PLACE THIS PRODUCT
NEAR AN OPEN FLAME OR
RADIATOR AT ANY TIME.**

