

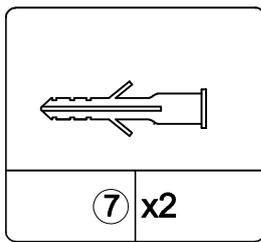
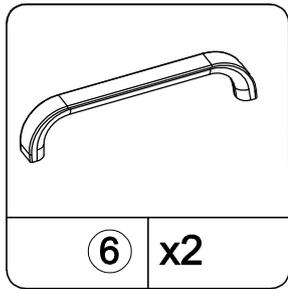
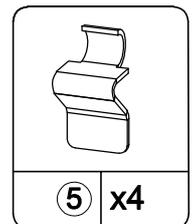
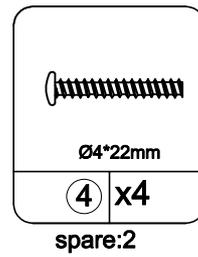
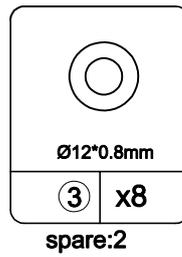
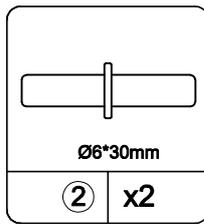


Hardware	Ctn No.	1
----------	---------	---

No.	Size	Qty
A	864x400x24mm	2
B1	865x393.5x23mm	1
B2	865x381x23mm	1
C1	816x374.5x20mm	1
C2	816x374.5x20mm	1
D	801x402x38mm	1
E	798.5x320x20mm	2
F	797x380x35mm	1
G	797x352x20mm	2

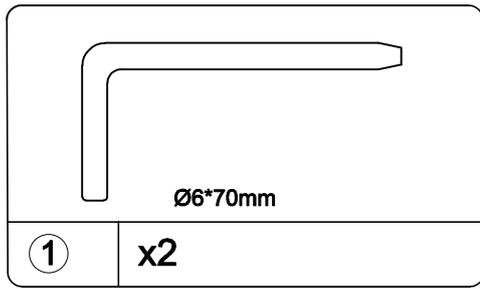


WALL ANCHOR

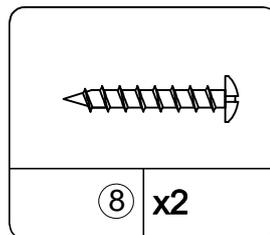


SCREW


(1) - Attach (A) to (E) as below shown.

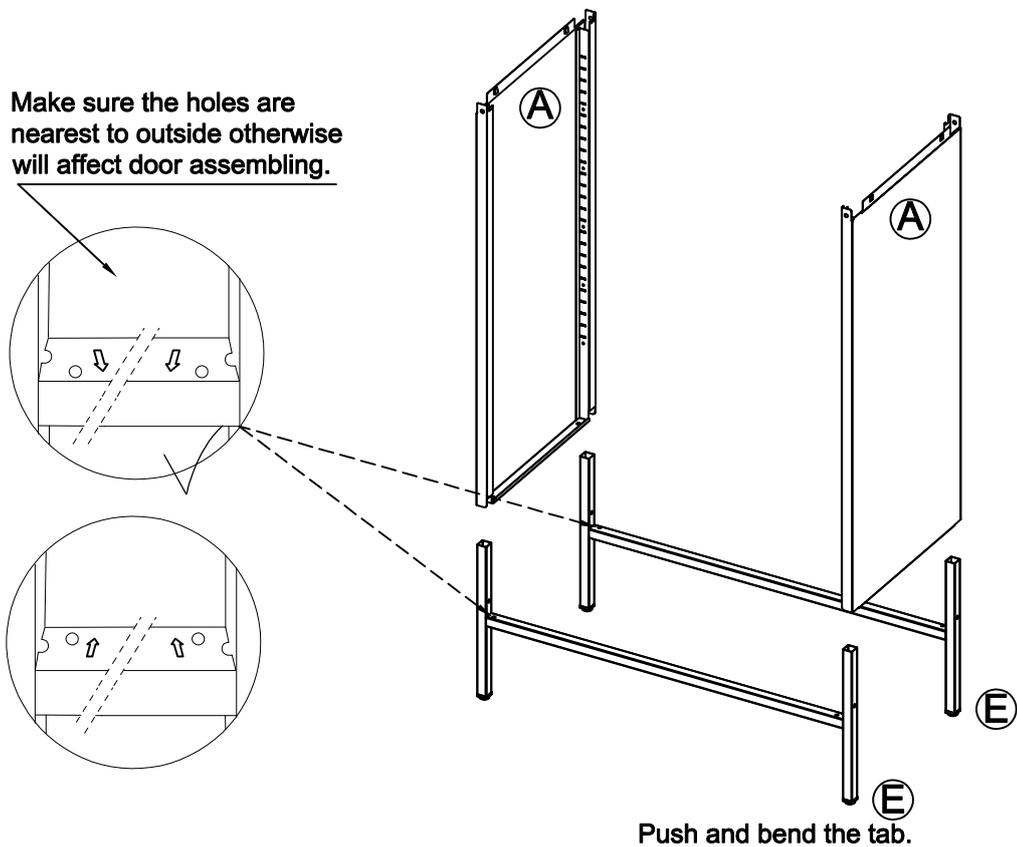


(2) - Attach (B1) & (B2) to (A) & (E) as below shown.

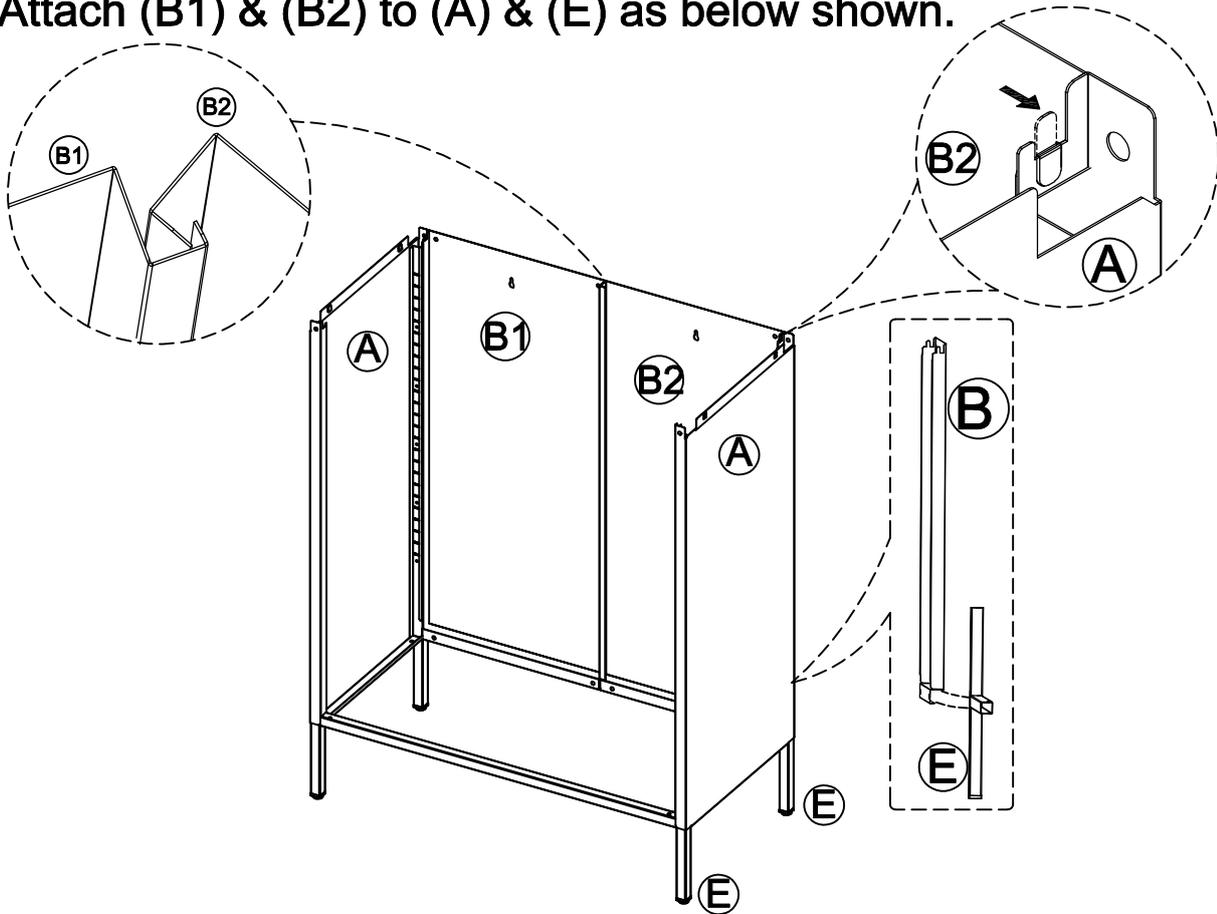


(3) - Attach (F) to (A) & (B1) & (B2) & (E) as below shown.

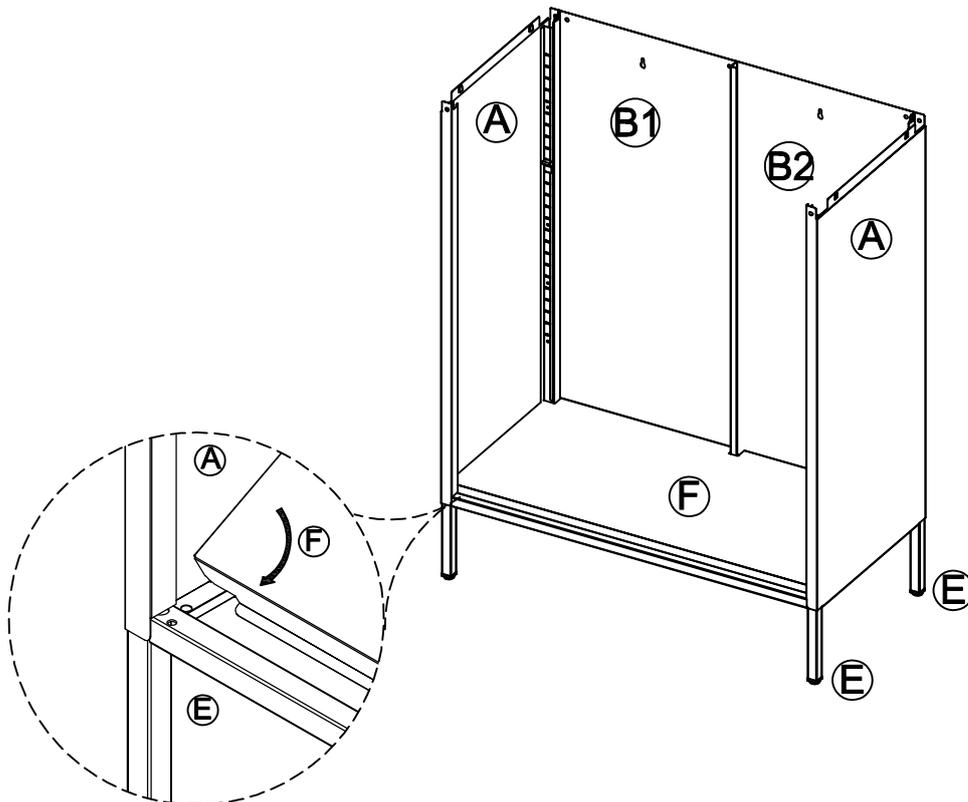



(4) - Attach (D) to (A) as below shown.

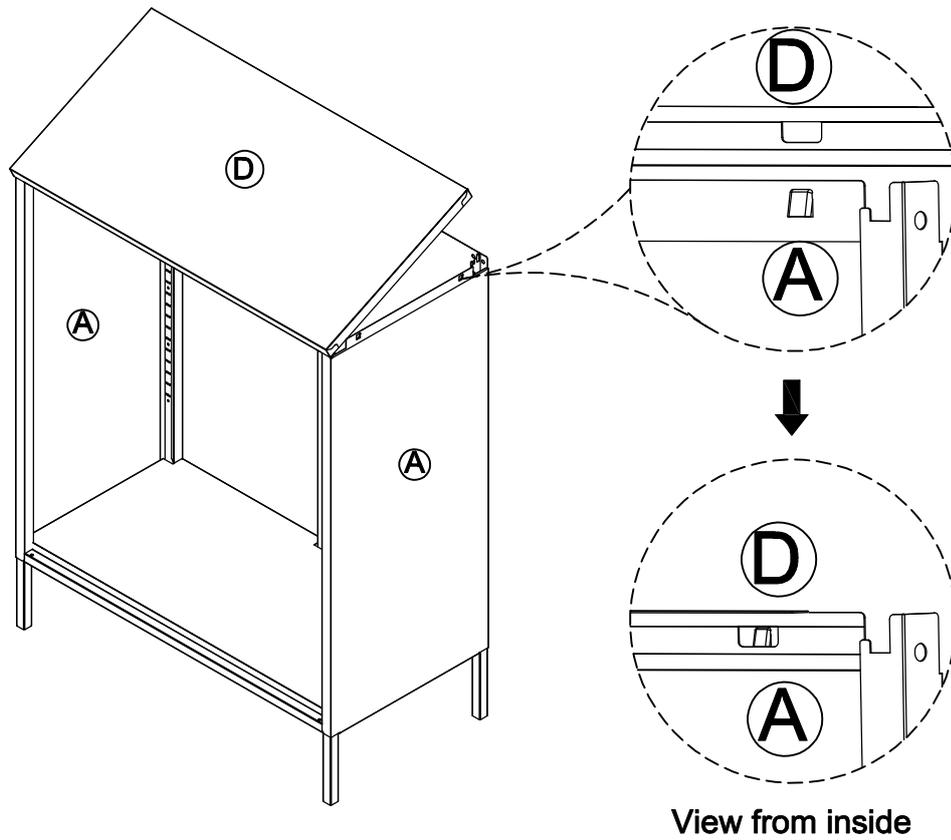




(5) - Attach (G) to pre-assembled unit as below shown.

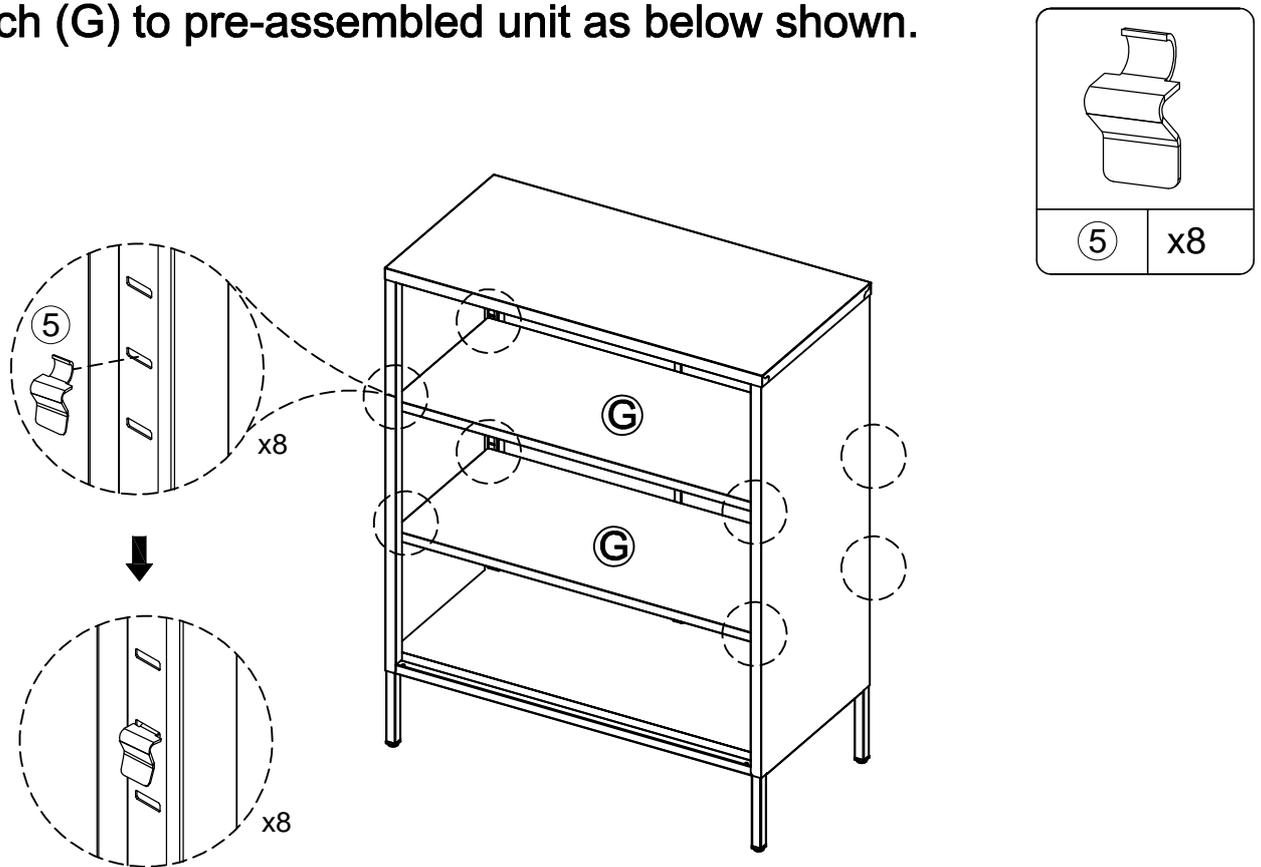

(6) - Attach (2) & (3) to pre-assembled unit as below shown.





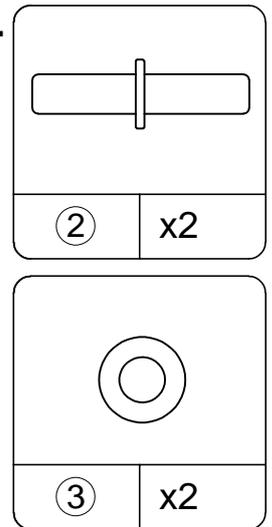
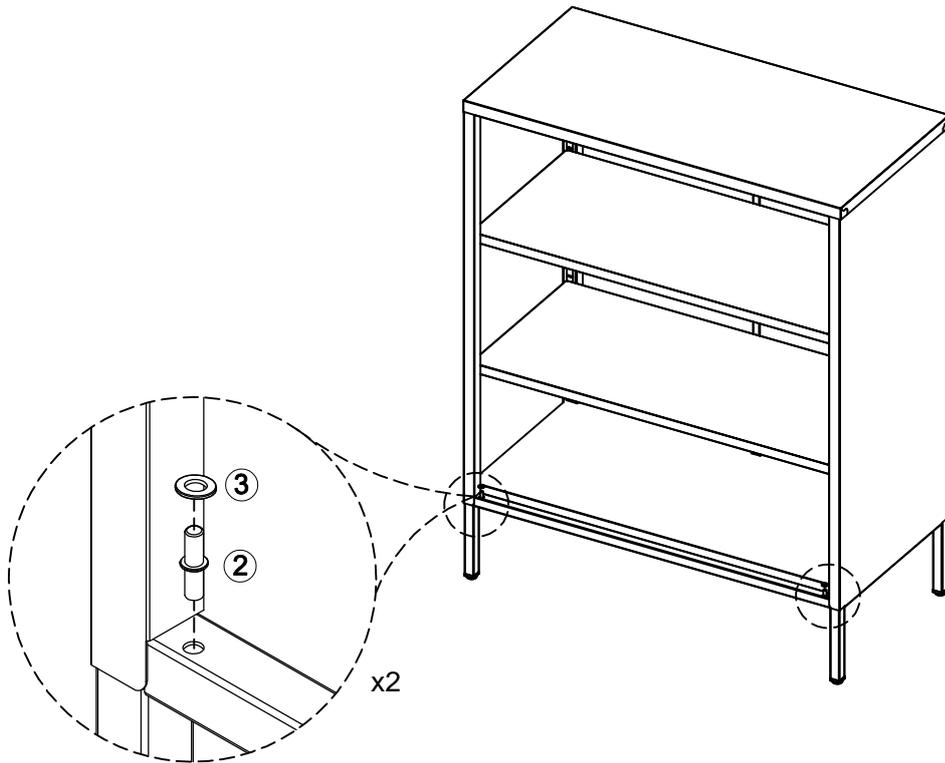


(7) - Attach (C1) & (C2) to pre-assembled unit as below shown.



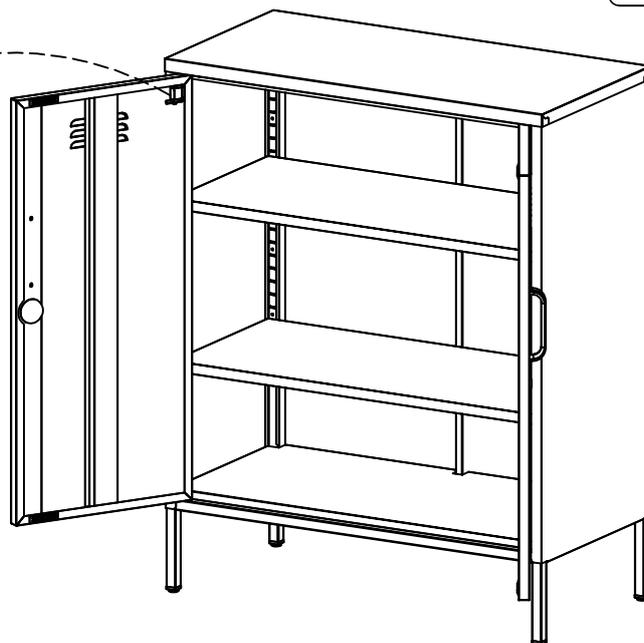
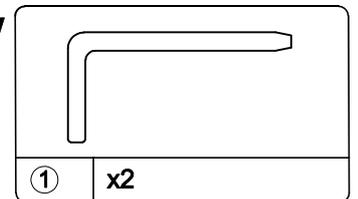
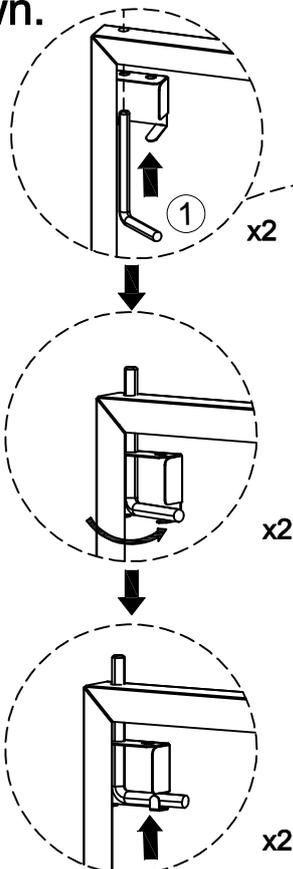


Push and bend the tab.

(8) - Attach (6) to (C1) & (C2) as below shown.

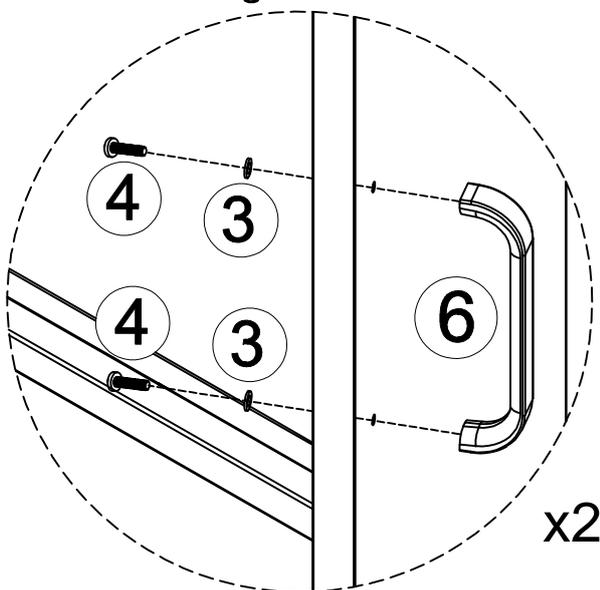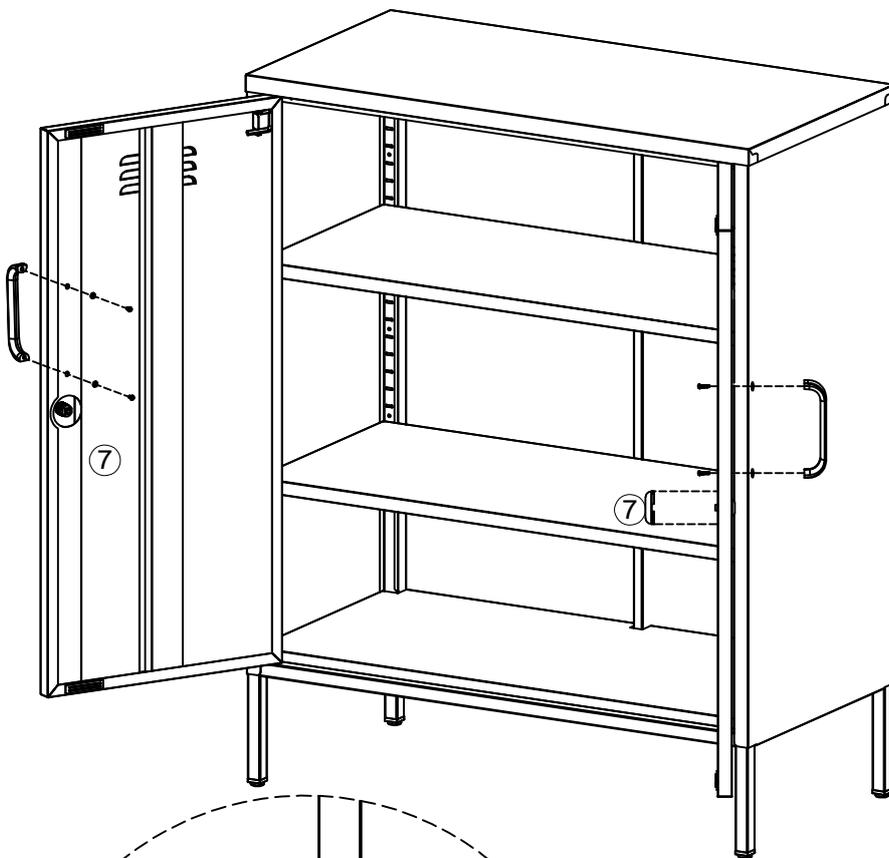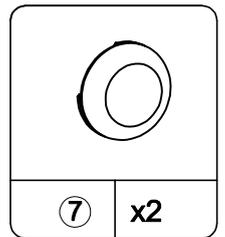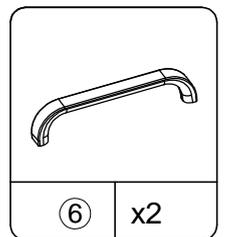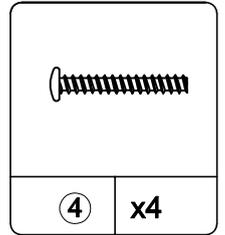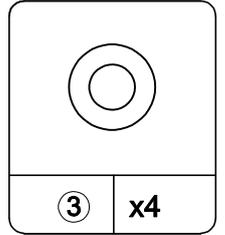

(10)

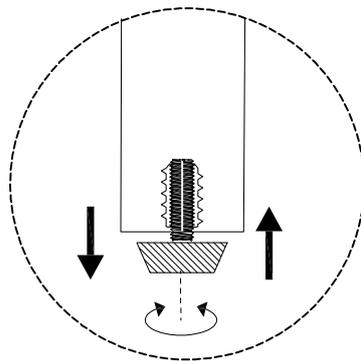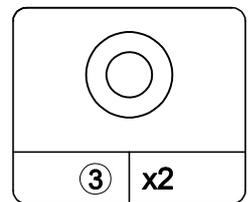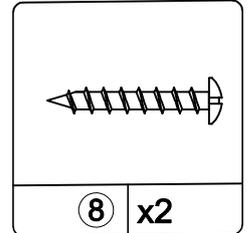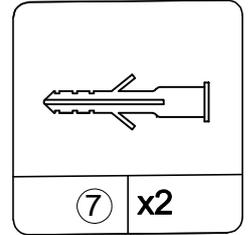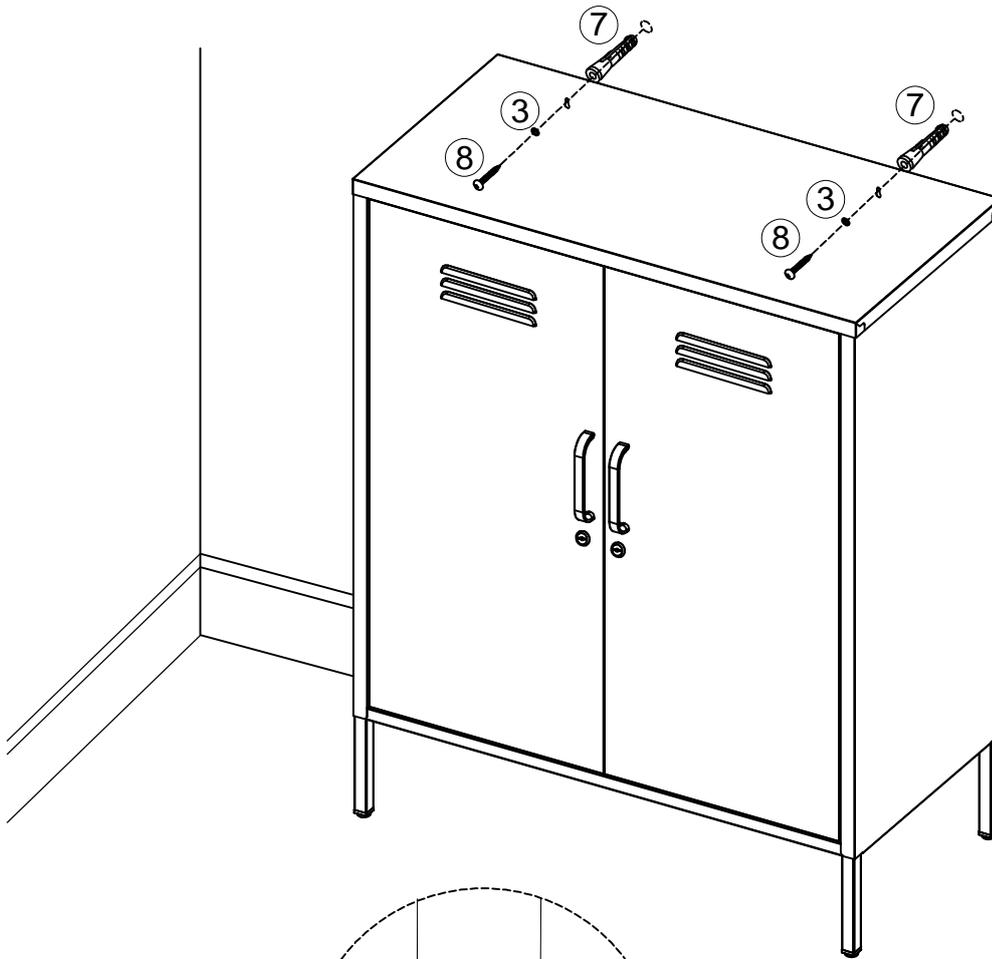

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.