


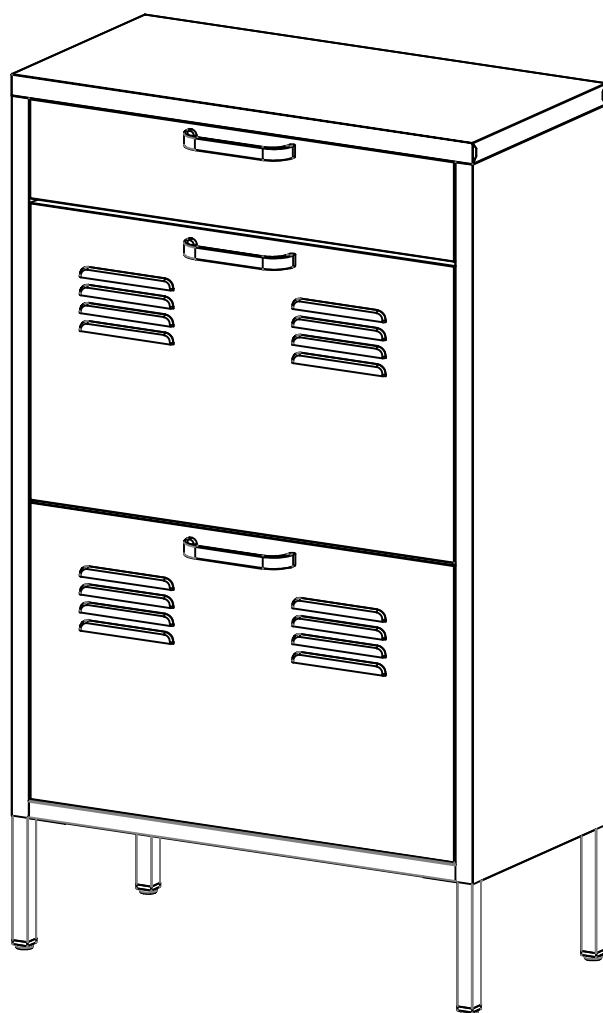
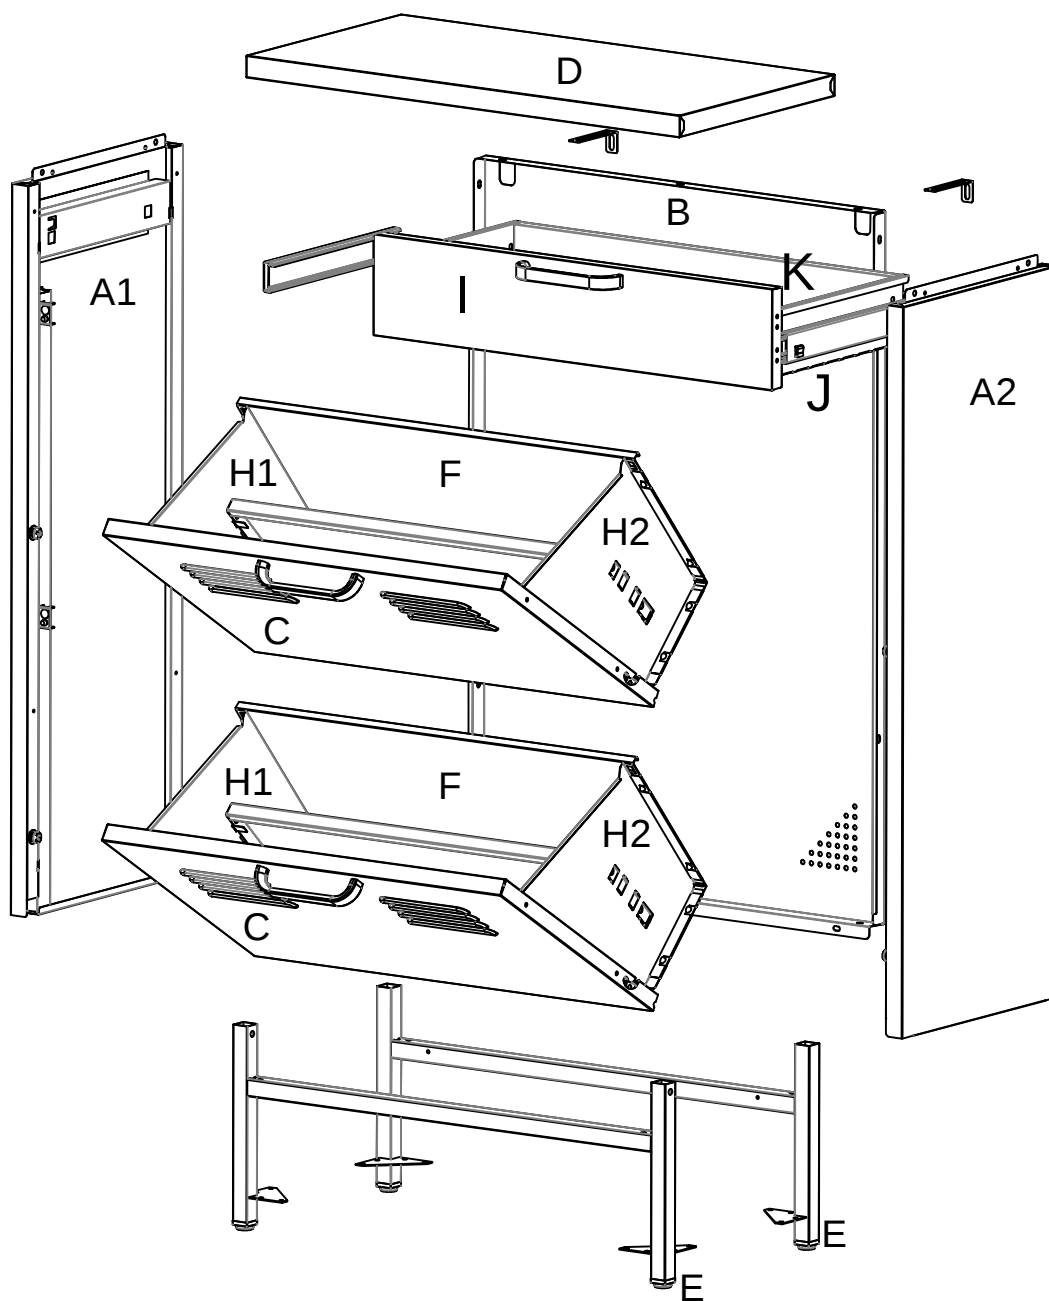




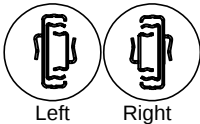


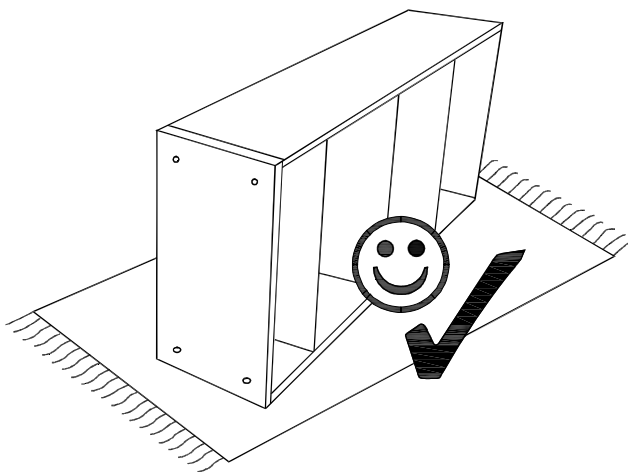






① x41	② x4	③ x2	④ x6	⑤ x4
				
Ø5*12mm	Ø5*10mm		Ø4*22mm	
⑥ x3	⑦ x2	⑧ x2	⑨ x6	
				
	Ø8*38mm	Ø4*38mm	Ø12*0.8mm	
⑩ x1	 			
	Left Right			

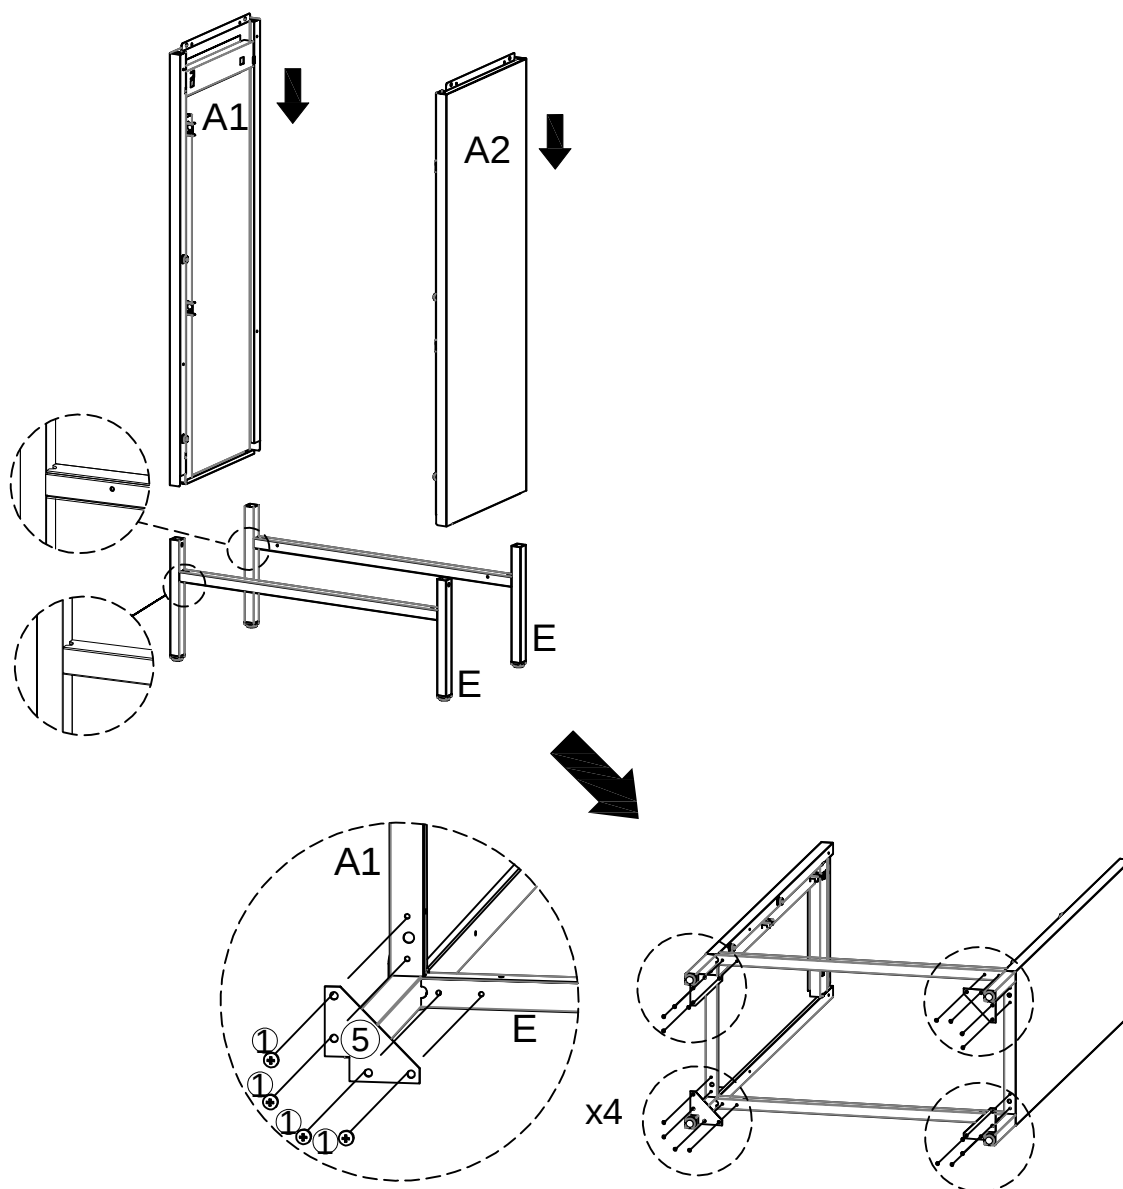







1

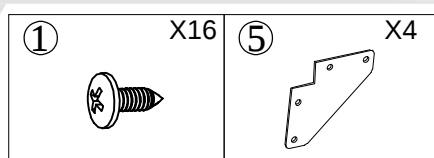





2

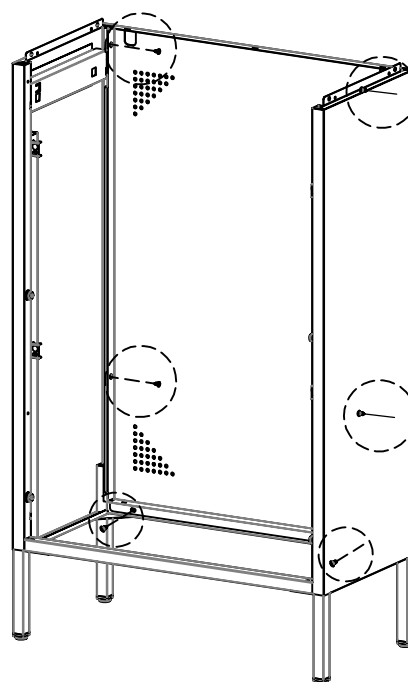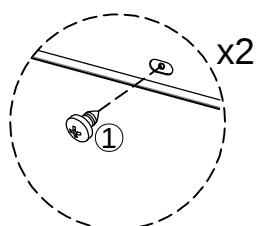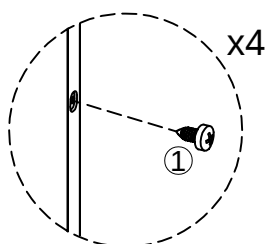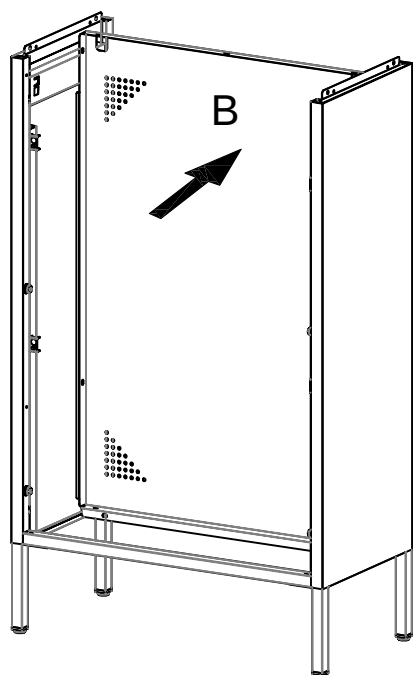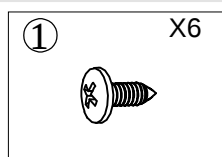


3

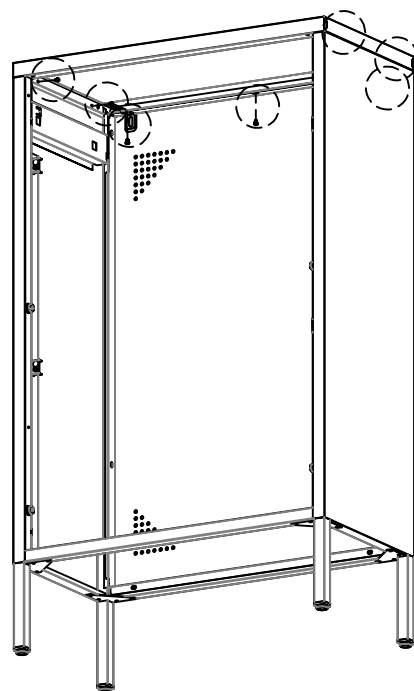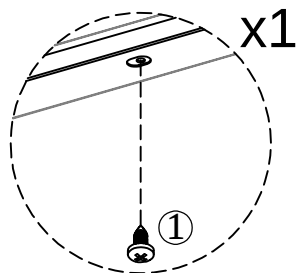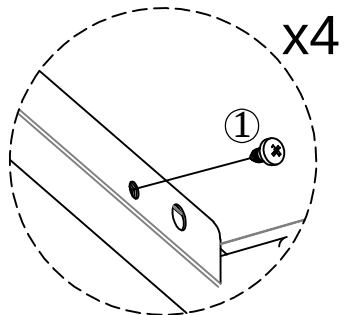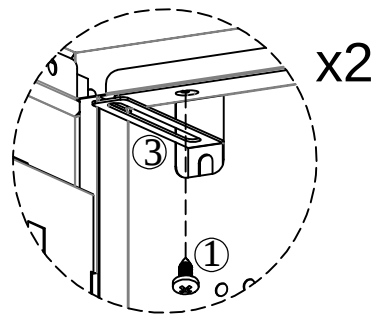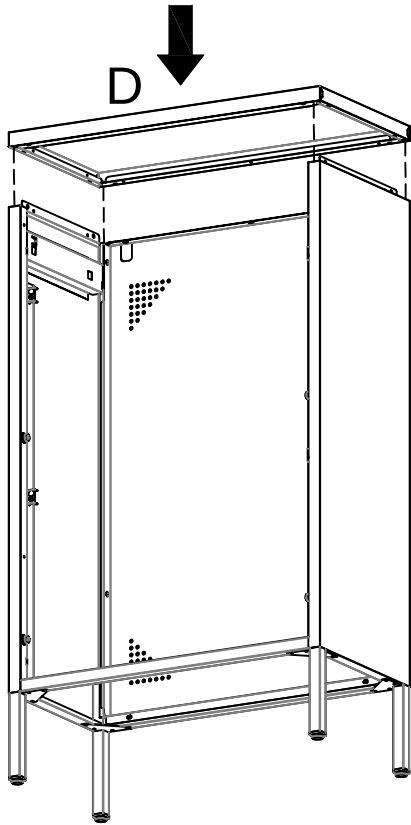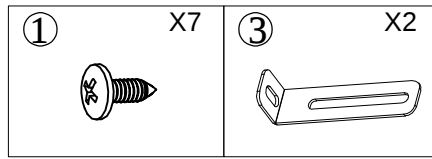

4

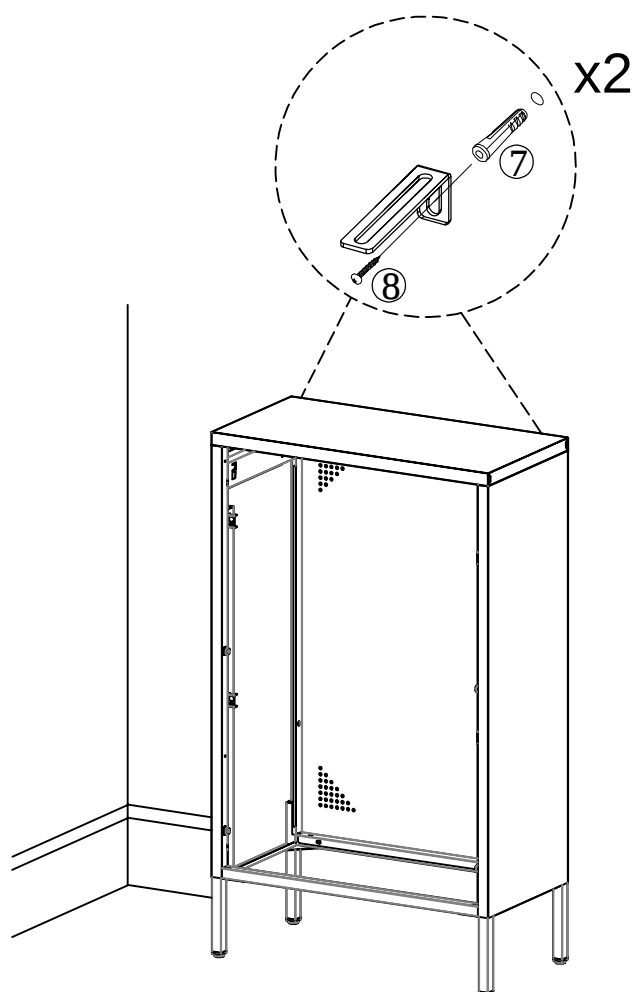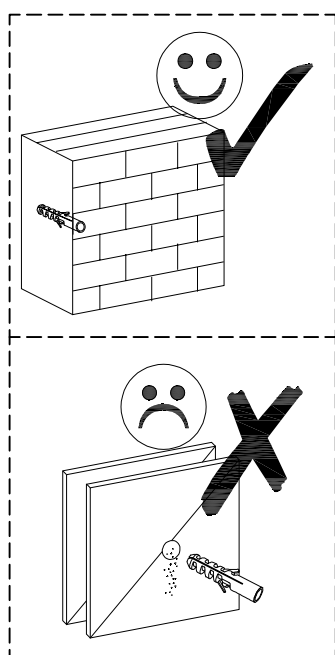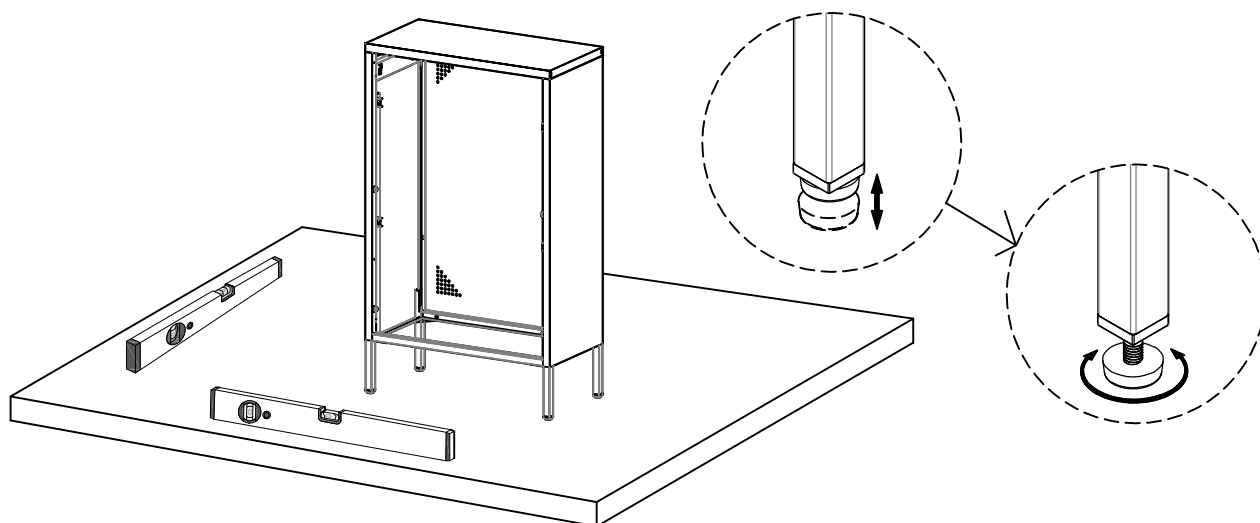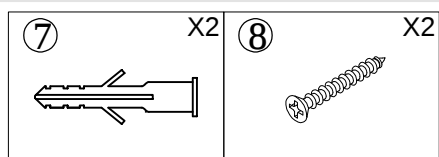

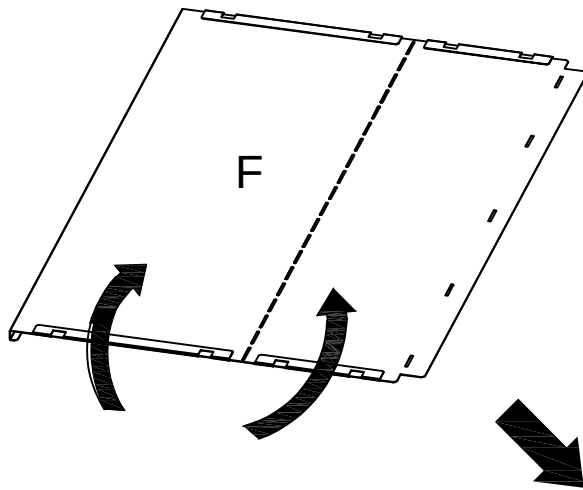


Panel F comes as one flat panel. There are perforations along the middle of the panel; fold the panel at right angles along the line of the perforations, ensuring that the securing points for the drawer sides are on the inside of the folded drawer. The drawer sides attach by sliding into the securing points on each side of panel F.

Attach each drawer side by sliding it into the securing points on each side of panel F.

Each drawer side panel has perforated tabs running vertically down the middle of the panel. Using your fingers, gently bend each tab inwards so that they stick out on the inside of the drawer.


Push and bend these tabs toward the inside of drawer.

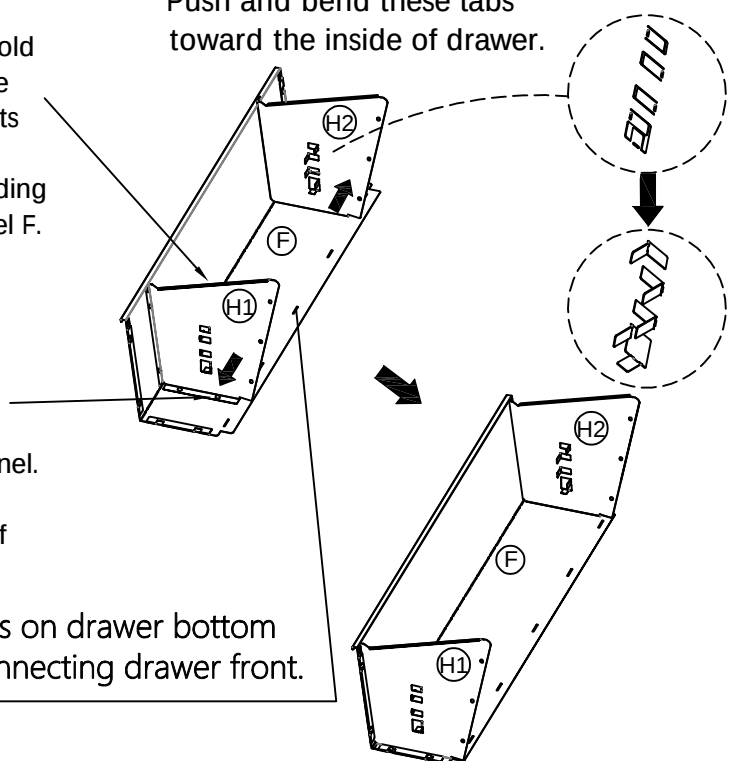

These slots on drawer bottom are for connecting drawer front.

x2


6

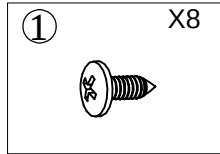


The drawer front has tabs on the lower edge; these tabs slide into slots on the bottom front edge of the drawer to connect the drawer front to the drawer bottom. Tip the drawer front away from the drawer bottom on an angle with the tabs closest to the drawer bottom. This will enable easier sliding of the tabs into the slots. Once the tabs are inserted, move the drawer front to an upright position to allow it to click into the drawer bottom edges. Bend each of the inserted tabs in the direction of the drawer front to ensure a secure connection.




Panel F comes as one flat panel. There are perforations along the middle of the panel; fold the panel at right angles along the line of the perforations, ensuring that the securing points for the drawer sides are on the inside of the folded drawer. The drawer sides attach by sliding into the securing points on each side of panel F.

Each drawer side panel has perforated tabs running vertically down the middle of the panel. Using your fingers, gently bend each tab inwards so that they stick out on the inside of the drawer.




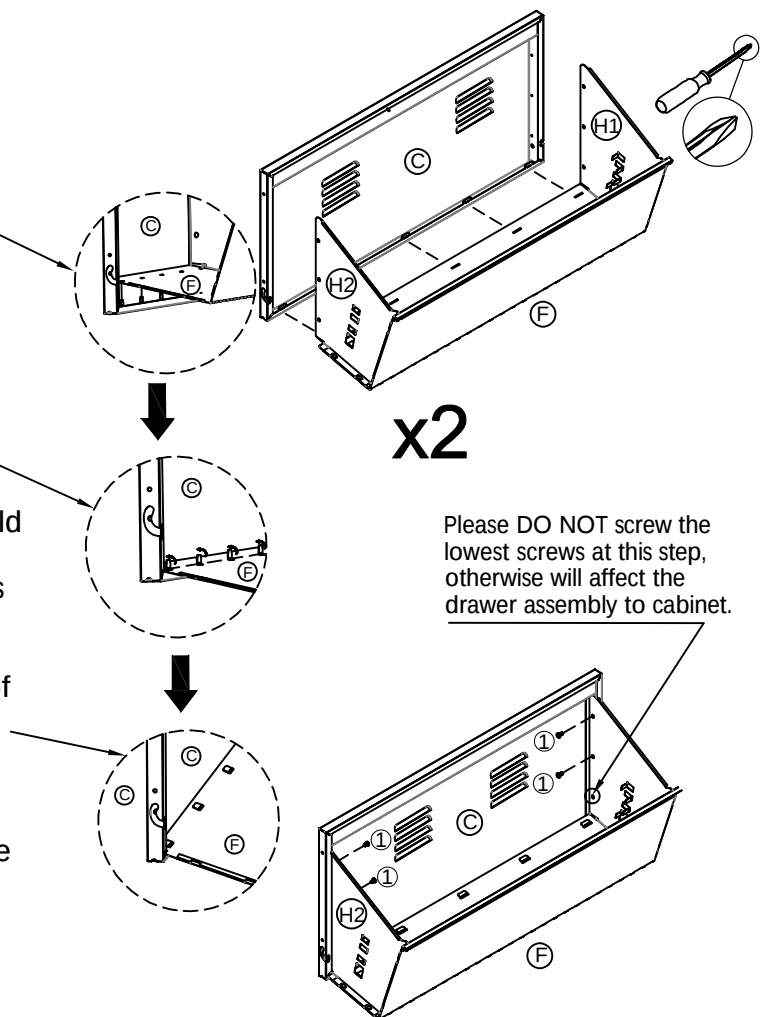


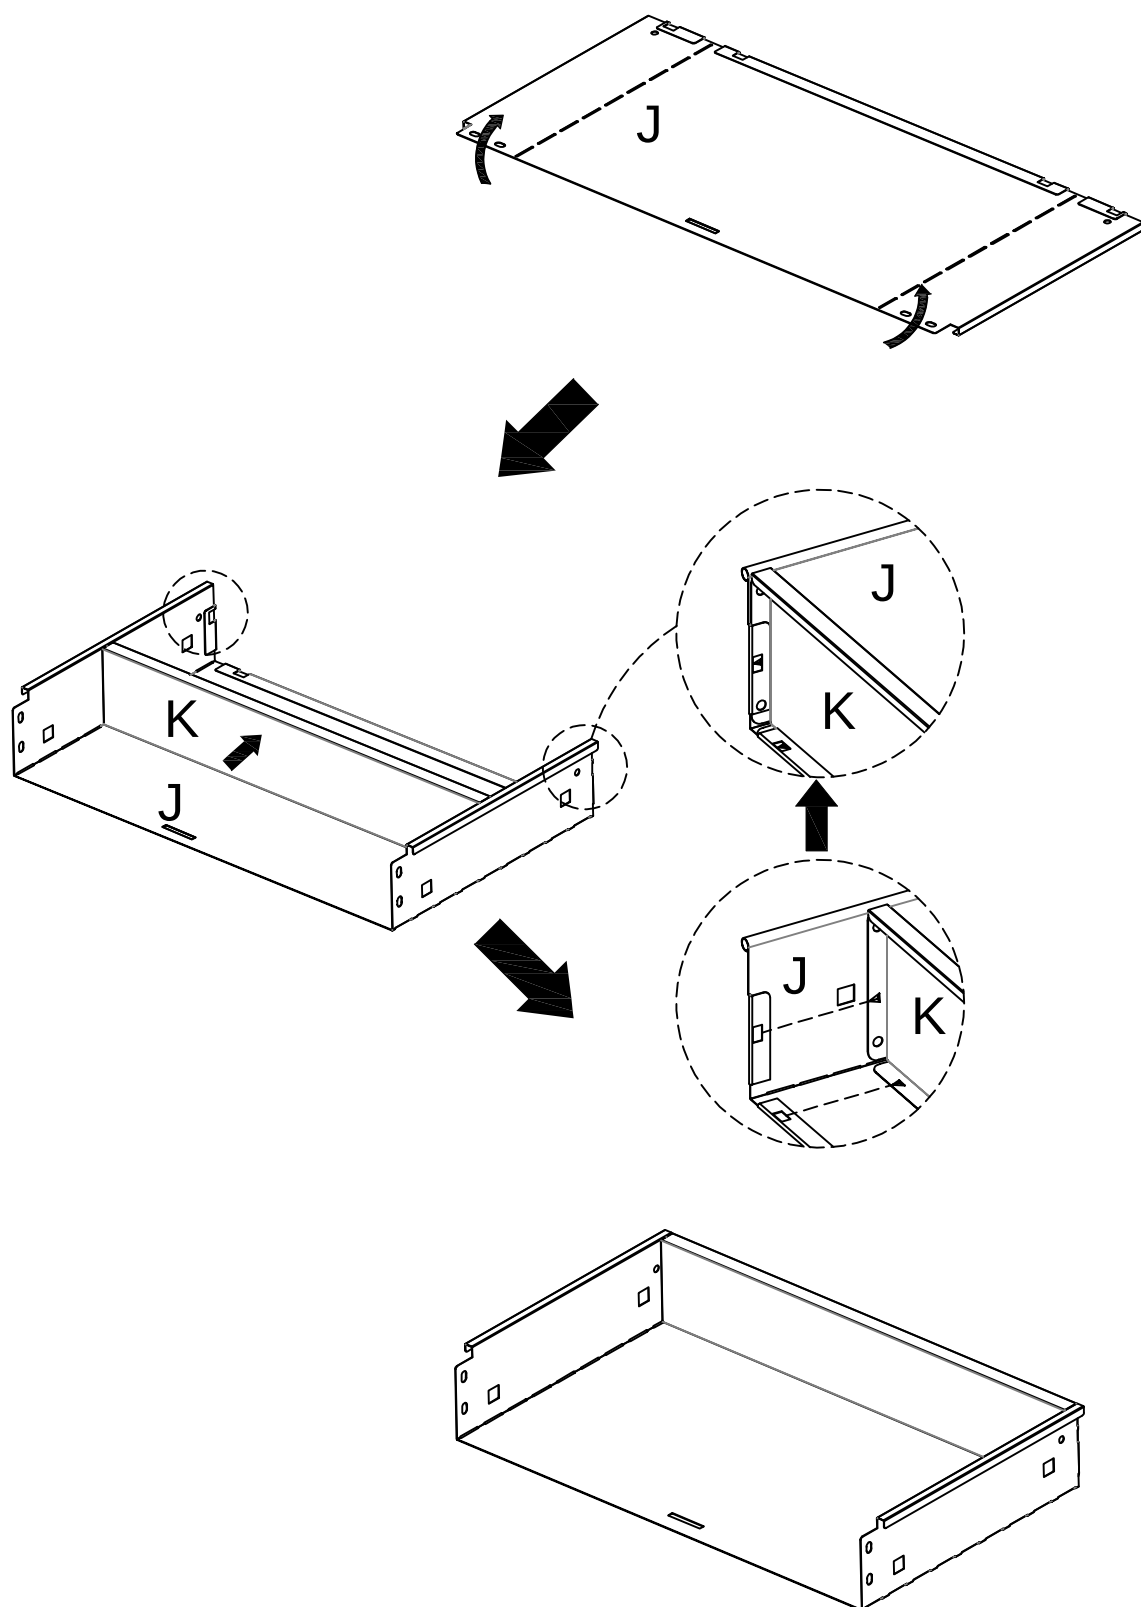

8

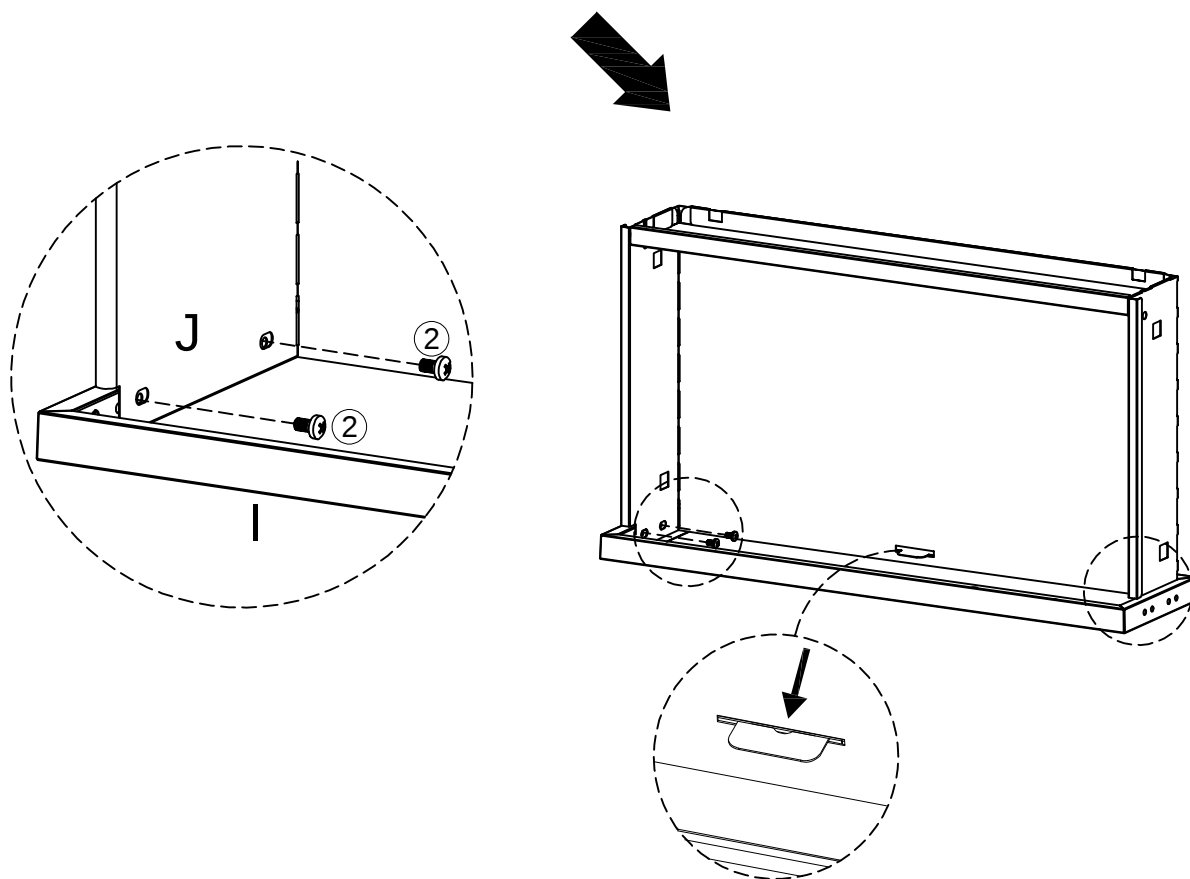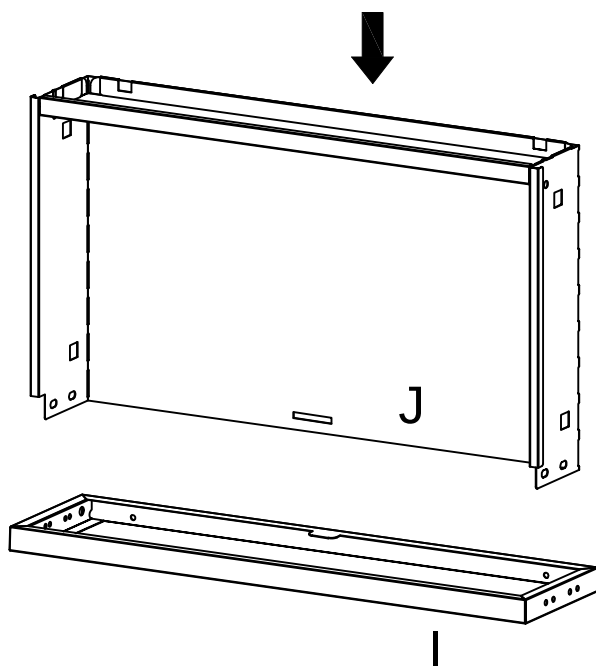
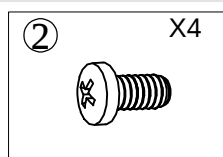


9

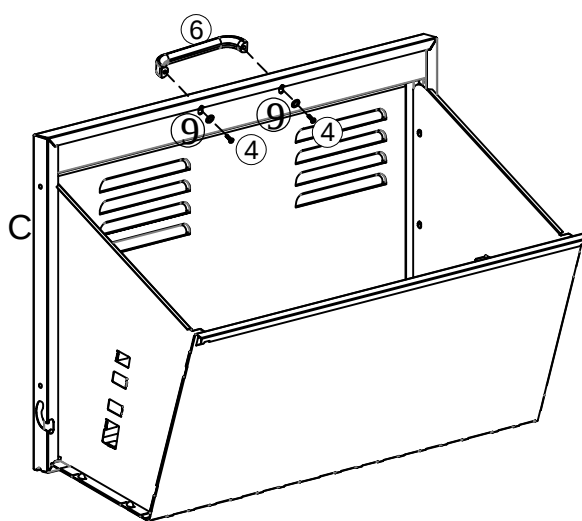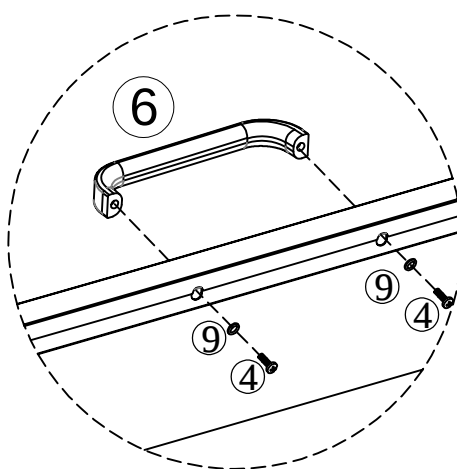
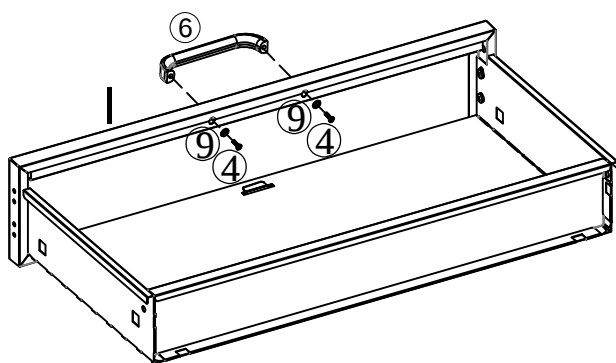
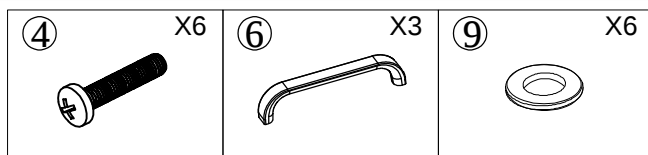


x2

10

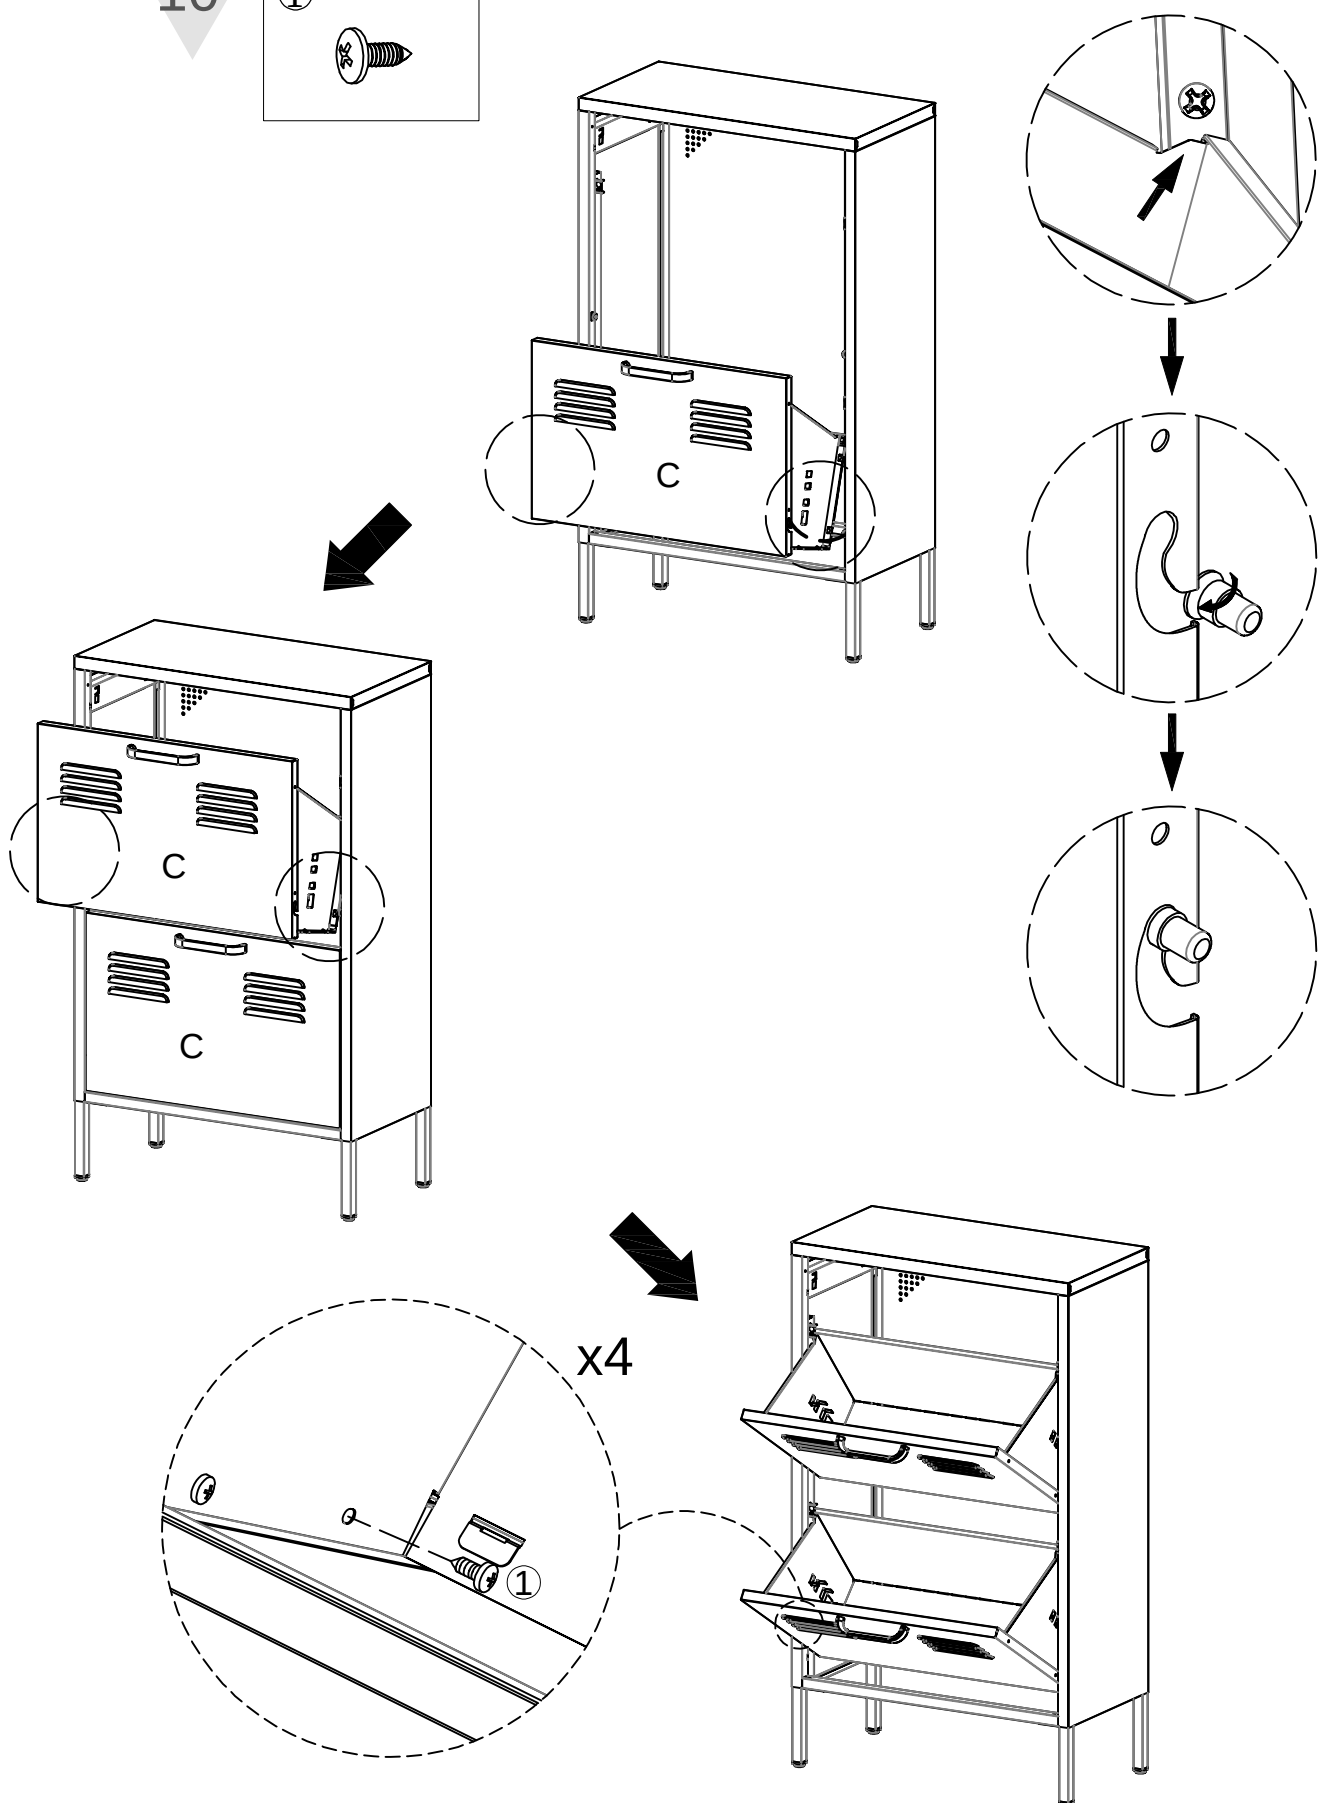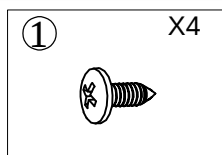

11

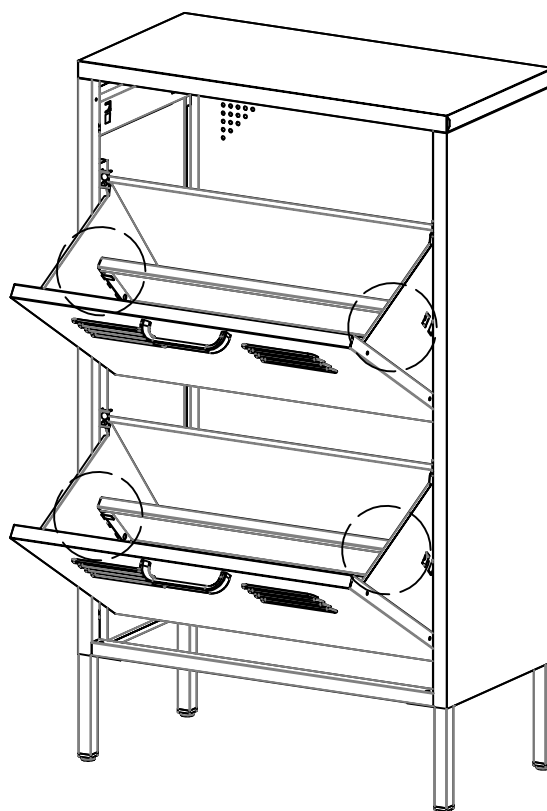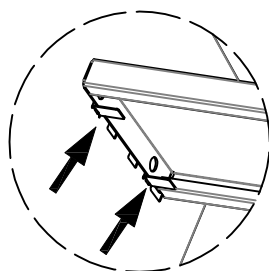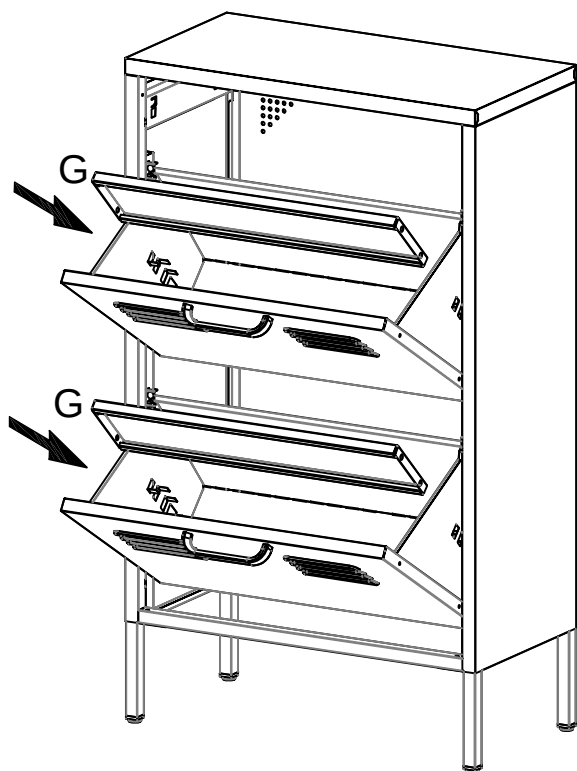

13

12

